MF-JET 495

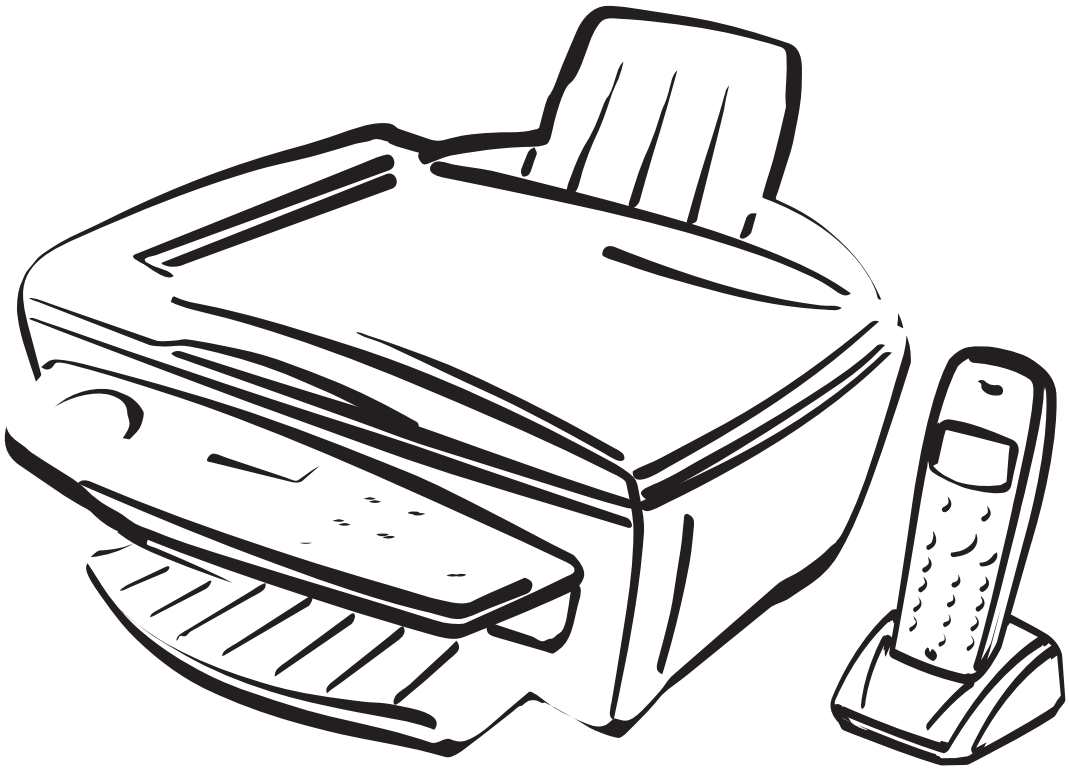

PHILIPS

Description of the multifunctional machine

Base station

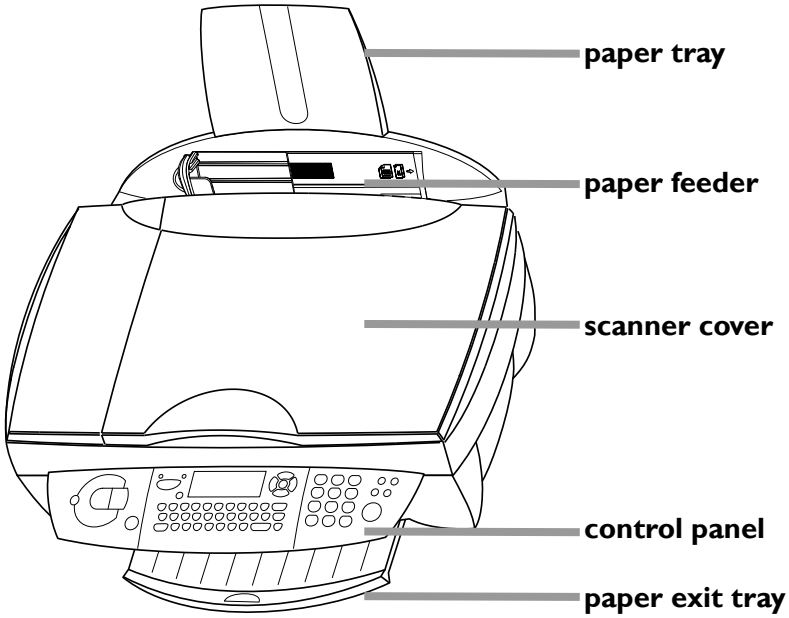

Cordless handset

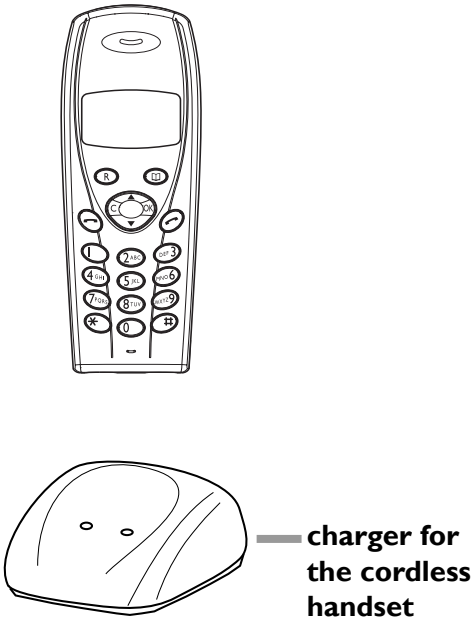

Display symbols on the base station

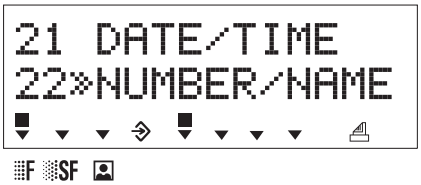

Selected options will be highlighted with an arrow (»)

Resolution:

F for text and graphics

SF for very small print and graphics

for photographs

If none of the three arrow symbols (▼) in the left-hand part of the display is marked with a ■ the machine is in standard mode

transmission of faxes or SMS

The square (■) above the four arrows (▼) in the middle of the display shows how full the memory is

on: faxes will be received automatically
flashing: faxes are stored in the memory
off: memory is full or you have disabled automatic fax reception

Display symbols on the cordless handset

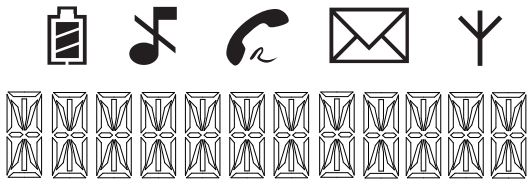

if the symbol lights up the rechargeable battery is charged. If the symbol appears on the display the rechargeable battery is almost flat

silent ringing

lights up when you make a call and flashes when you receive a call

an SMS has been received and can be read on the display of the base station

lights up when the cordless handset is registered to the base station and is within its range. If the symbol flashes the cordless handset is not registered to the base station. The symbol does not appear if the cordless handset is out of range of the base station or the base station has been disconnected from the power supply

Key assignment on the base station

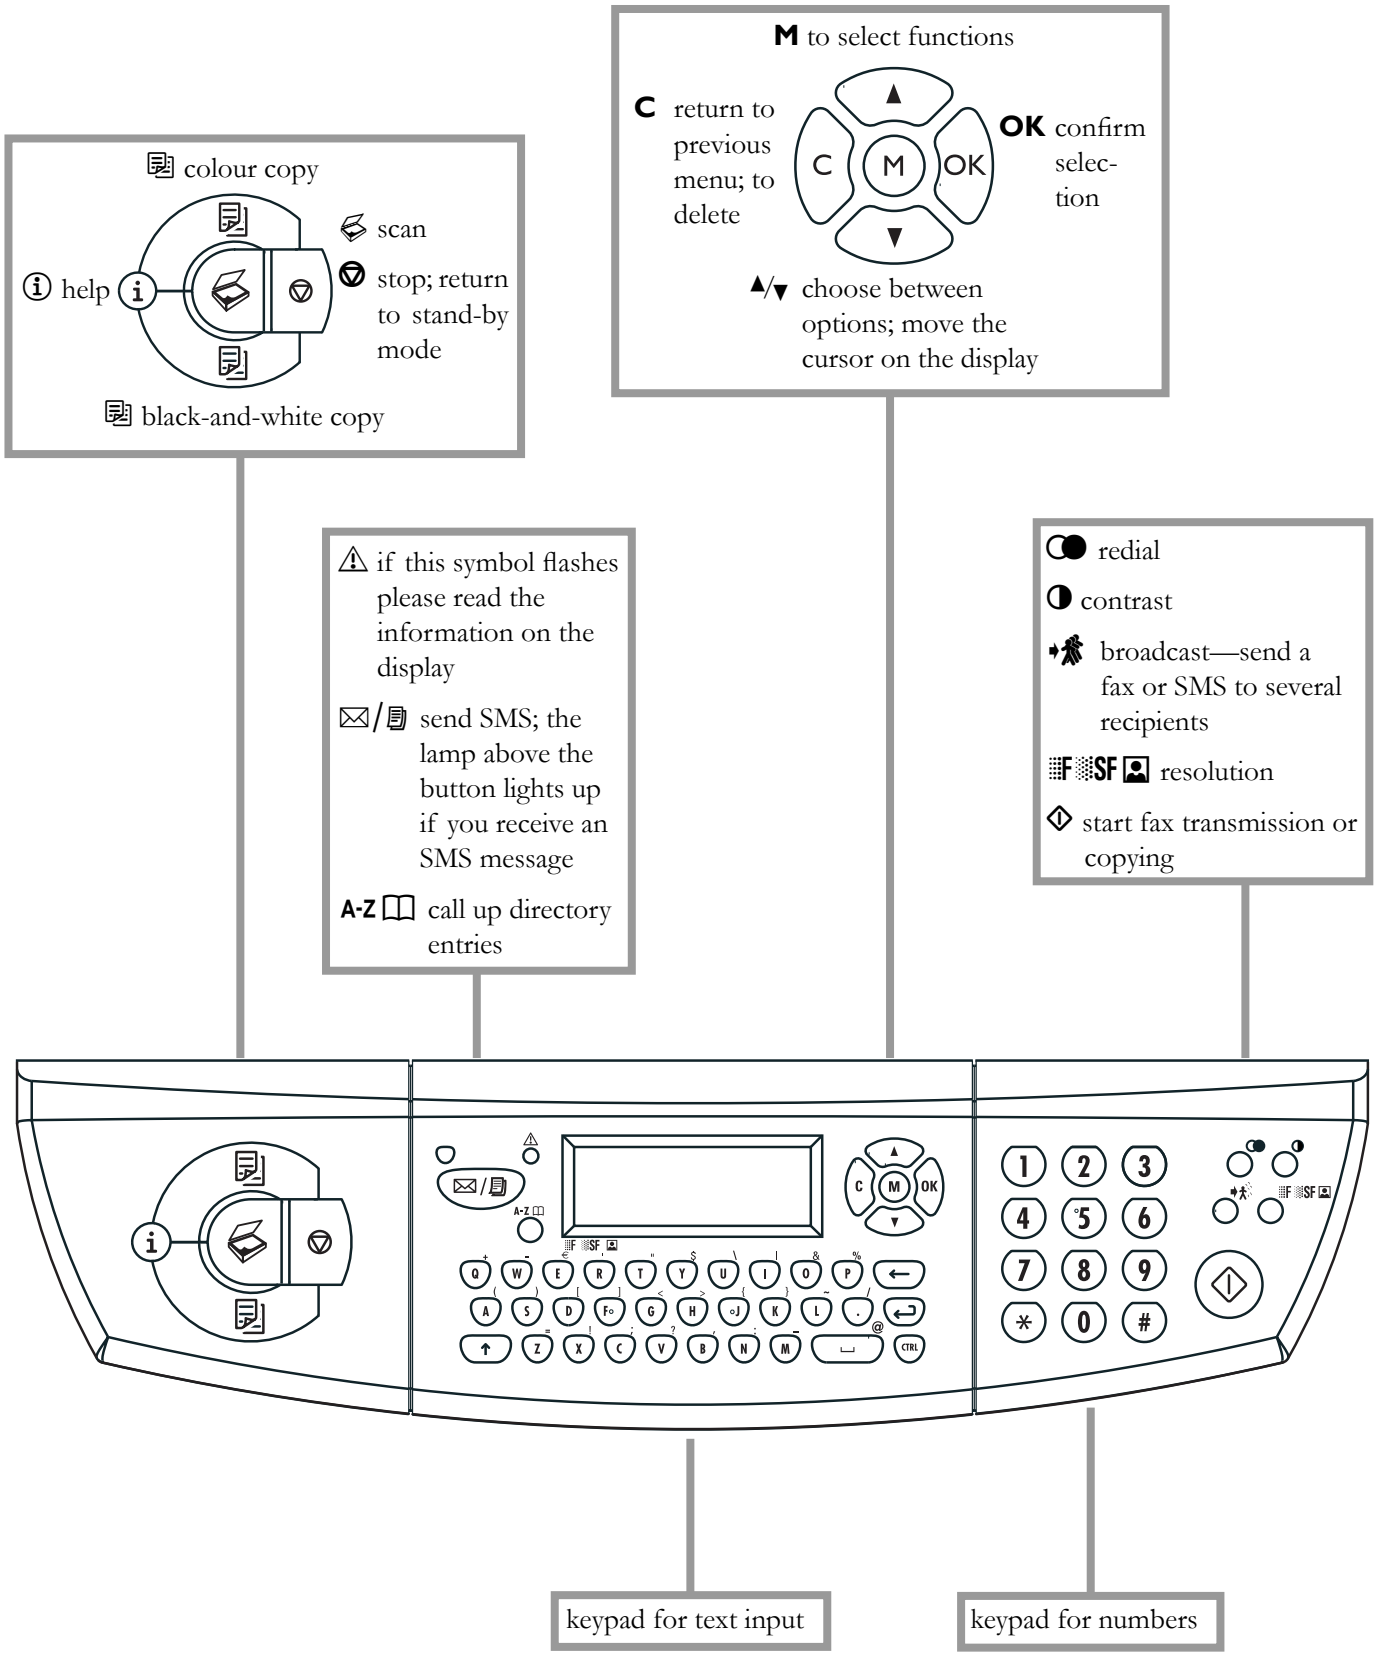
colour copy
help
scan
stop; return to stand-by mode
black-and-white copy
M to select functions
C return to previous menu; to delete
OK confirm selection
▲/▼ choose between options; move the cursor on the display
if this symbol flashes please read the information on the display
send SMS; the lamp above the button lights up if you receive an SMS message
A-Z call up directory entries
redial
contrast
broadcast—send a fax or SMS to several recipients
resolution
start fax transmission or copying
keypad for text input
keypad for numbers

Key assignment on the cordless handset

R press briefly: to call the last number dialled
long press: call up recently received calls with calling line identification

C press briefly: return to last menu item, delete the last entry made
long press: return to standby mode, delete an entire entry

to end a call

▲/▼ for selecting a function; searching in the redial list

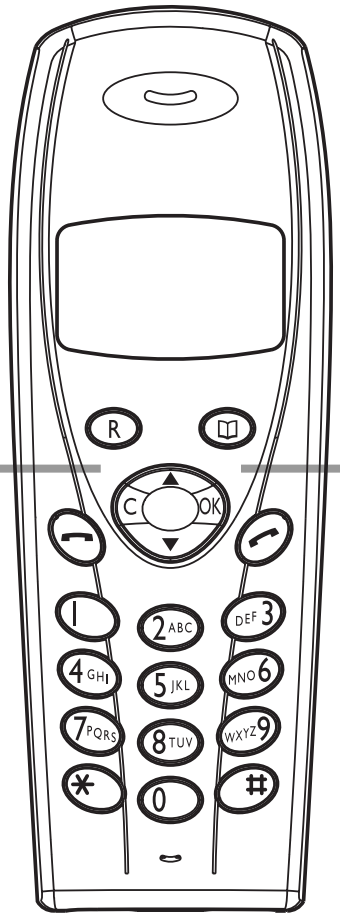

for calling up a telephone book entry on the cordless handset (under BASE you will find the directory of the base station); for starting fax reception after lifting the cordless handset

OK confirm entries

press dial key briefly: to take your cordless handset off hook
long press (two seconds): to call up the last numbers dialled

Menu functions on the cordless handset

Your cordless handset is equipped with the following menu functions, which you can access with the ▲/▼ button:

1 Telephone book 1 PHONE BK
You can create new entries, edit existing entries and access the directory on your base station (see chapter **Cordless handset** / Telephone book).

2 Calls / Logs 2 CALLS
The logs list contains the last 30 transmissions (faxes sent and received, SMS messages and telephone calls). On your cordless handset you can delete the redial list or check the duration of the last fax transmission or last telephone call (see chapter **Hints & tips** / Logs).

3 Ring tone 3 RING
On your cordless handset you can select a ring tone and adjust the ring volume (see chapter **Cordless handset** / Ringer volume). You can switch to silent mode with the function 33 (see chapter **Cordless handset** / Silent call reception). Function 34 lets you switch the key tones on the cordless handset on or off (see chapter **Cordless handset** / Audible signals).

4 Settings 4 SET
If function 41 is disabled, you must press to end a telephone call. If function 41 is enabled you can end a telephone call by replacing the cordless handset on the charging station.

5 Base 5 BASE
Use function 51 to register an additional cordless handset of the original type on the base station (see chapter **Hints & tips** / Registering and deregistering an additional cordless handset of the original type). If you use one cordless handset for more than one base station you can set which base station has highest priority with function 52.

⚠ The menu functions for the base station are listed in the **Appendix** / Functions list. You can print out this list with function 51 (on the base station).

Contents

Safety instructions.....6

Installation 7

Unpacking 7
Operating the base station.....7
Loading paper.....7
Operating the cordless handset.....8
Connections 9
Additional devices.....9
Power supply.....10
Country selection 10
Inserting cartridges 10
Cartridge alignment 11
Your number and name 11
Date and time 12
PC connection 12
Software installation.....12

Settings.....17

Date and time 17
Your number and name 17
Country and language.....17
HELP function ⓘ 17
ISDN connection.....17
Network type (PABX) 17
Set fax reception.....18
Special settings.....18
External answering machine 18

Cordless handset 20

Making a call 20
Redial.....20
Telephone book 🕮 20
Calling line identification 20
Ring signal type 20
Ringer volume 20
Adjusting the call volume 21
Silent call reception 21
Audible signals.....21
Muting.....21
Internal phone calls 21
Additional telephone 21
Locate the cordless handset.....22
Switching on and off 22

Fax 23

Sending a fax 23
Directory A-Z 🕮 23
Redial 24
Broadcast 25
Resolution F SF 25
Contrast 25
Receiving faxes 25
Memory lock.....25
Send report.....26
Delayed transmission.....26
Polling 26

Copy.....27

Inserting a document.....27
Standard copy 27
Optional copy 27

Scan to PC 29

Inserting a document.....29
Scanning a document 29

Print.....31

SMS.....33

Sending an SMS ✉/ 33
Receiving an SMS 33

Advanced settings 35

Settings list 35
Fax settings.....35
SMS settings.....35
Scan settings.....35
Printer settings.....36

Hints & tips 37

Ordering information.....37
Change cartridges.....37
Cartridge capacity.....38
Logs.....38
Commands 39
Lock.....39
Registering and deregistering an additional cordless handset of the original type 39
Care and maintenance 40

Appendix.....42

Functions list.....42
Technical settings 43
Technical data 43
Guarantee 44
Index 46

Contents

Safety instructions

Please read and follow all warning notices and instructions.

Your multifunctional device should be installed on a level and stable surface. The surface should be smooth and horizontal. The machine may be damaged if it falls and may cause serious injury, especially to small children. Place the MF-JET 495 at least 10 cm away from other electrical devices and objects.

Do not place the machine in direct sunlight. Do not place it near to a radiator, heater, radio, television or air conditioning unit. Do not allow it to come into contact with dust, water or chemicals.

Make sure that air can circulate freely around the MF-JET 495. Do not operate your multifunctional device in enclosed spaces such as boxes, cupboards, cabinets etc. Do not cover the machine. Do not place the MF-JET 495 on soft surfaces such as beds, duvets, cushions, sofas or carpets as there is a risk of overheating and fire.

Only use the power supply included with the product. Using an unauthorised power supply may damage the device.

Do not touch telephone wires or mains cables where the insulation is missing or damaged unless they are already disconnected.

If the housing of your multifunctional device or the power supply—in particular the power or telephone cables—, are damaged, please unplug the MF-JET 495. The housing of the device may only be opened by authorised service personnel.

Unplug the MF-JET 495 from the mains and telephone line before cleaning. Do not use liquid or aerosol cleaning agents such as sprays, alcohol or polishes.

Do not expose the machine to rain or any other form of moisture. There is a risk of electric shock or fire. If any liquid is accidentally spilled into the MF-JET 495, immediately remove the power plug and have the device professionally inspected.

If you want to use another cordless phone, ensure that the machine and the base station of the other cordless phone are at least 15 cm apart otherwise you may get acoustic interference in the handset.

Your MF-JET 495 has been tested to EN 60950 or IEC 60950 and may only be operated on telephone networks and power supplies that conform to these standards.

In a thunderstorm, disconnect the multifunctional device from both the mains and the telephone line. If you are unable to disconnect the MF-JET 495, avoid using the machine or the telephone during the storm. There is a risk of electric shock from lightning and risk of damage to the machine.

Your MF-JET 495 is only intended for use in the country in which it was purchased. It may only be operated with telephone systems and power equipment which meet these standards.

For safety reasons, the cordless handset should never be placed on the charger without its rechargeable batteries or battery cover.

Explanation of the safety instructions on the cordless handset:

⚠ General warning

⚠ Do not touch contacts

🛈 Further information in the user guide

Installation

Unpacking

Unpack the box and check that it includes the following:

telephone cable with plug (country-specific)

mains cable with plug



power supply



ink cartridges and starter card "Plug'n'Print"

paper tray

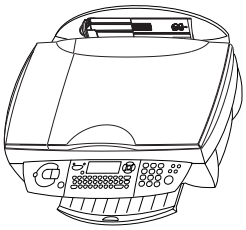

base station

cordless handset

charger for the cordless handset

three rechargeable batteries AAA/NiMH



installation CD

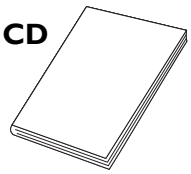

user guide

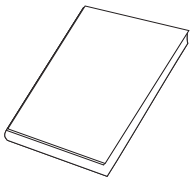

installation guide

Operating the base station

Please read all warning notices and instructions and follow them precisely!

1 Insert the paper tray in the slots provided behind the paper feed mechanism.

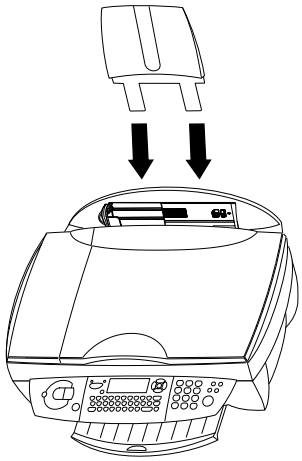

2 Pull out the paper exit tray.

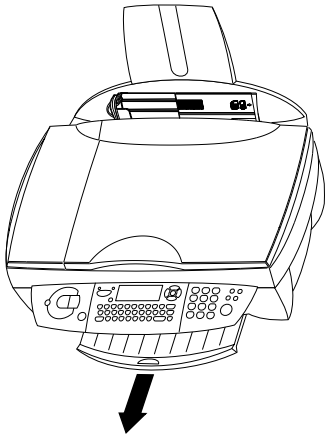

Loading paper

Please use only paper which is specifically intended for use with ink cartridge printers (standard format is **A4** 210×297 mm, 80 g/m²). Follow the instructions of the manufacturer.

> ⚠ Do not load paper while the MF-JET 495 is printing!
>
> In the event of a paper jam see chapter **Hints and tips** / Paper feed.

1 To prevent several sheets being drawn into the machine at once, first fan out the paper to separate the sheets and then straighten the stack on a flat surface before inserting it into the paper feed.

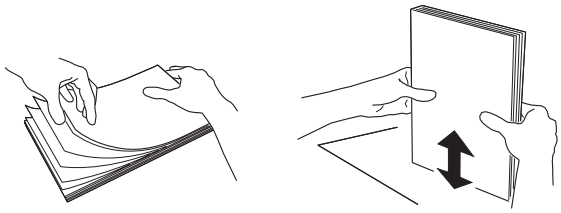

2 Insert **up to 100 sheets** of paper up to the end-stop in the paper feed mechanism.

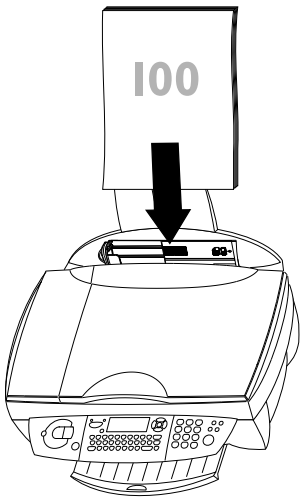

Operating the cordless handset

Your cordless handset is fitted with three AAA/NiMH rechargeable batteries at the factory. If you need to replace the rechargeable batteries you should replace them with original rechargeable batteries of this type.

1 Remove the battery compartment cover at the back of the handset by pressing in the small round opening with a tool. Push the cover back. Insert the three rechargeable batteries as indicated in the battery compartment.

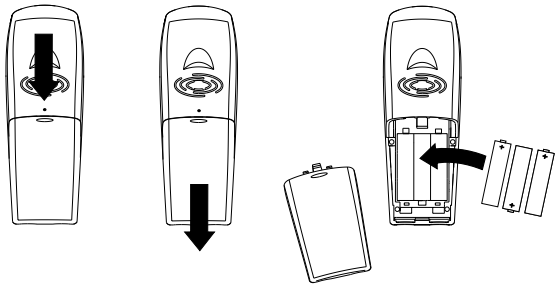

2 Close the battery compartment.

⚠ The base station and cordless handset are matched to one another at the factory. You do not have to make any adjustments.

Before you use the handset for the first time the rechargeable batteries need to recharge for at least 12 hours.

Do not use the cordless handset any further than 50 m (indoors) and 300 m (outdoors) from the base station.

The cordless handset should never be placed in the charging station without its batteries. This could permanently damage the cordless handset.

3 Connect the cordless handset to the charger and connect the charger to the power supply.

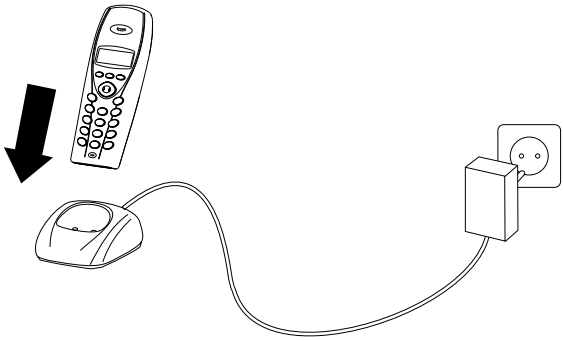

⚠ Fully draining the rechargeable batteries about once a week will prolong their life.

Do not use non-rechargeable batteries under any circumstances.

Dispose of old rechargeable batteries in accordance with the rules and regulations in your country.

The manufacturer accepts no liability for failure to comply with these instructions.

Connections

First connect the telephone cable plug socket labelled **LINE on the back** of the machine.

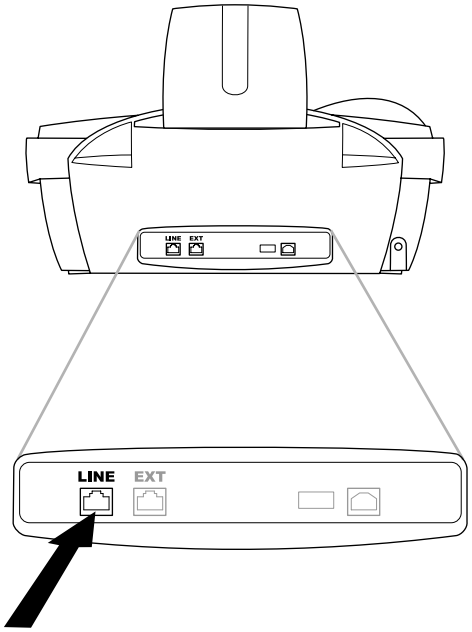

Next connect the telephone plug to the line socket on the wall.

In the UK

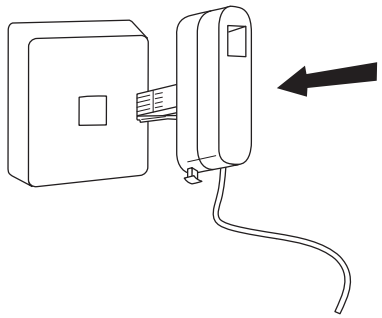

For all other countries

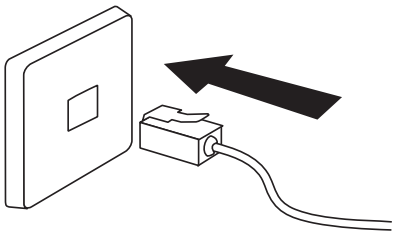

Additional devices

In addition to your multifunctional machine, you can also connect other devices such as additional cordless telephones, call-fee indicators answering machines or modems to a single telephone line.

If you operate another SMS-compatible cordless phone on the same line there is no guarantee that a particular SMS will be received on your multifunctional machine or on the other handset. However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the additional cordless phone.

If you intend using special auxiliary devices with your multifunctional machine, please contact your dealer.

Same socket

You can connect additional devices to the same telephone socket. Make sure the multifunctional machine is the first device connected to the line.

In the UK

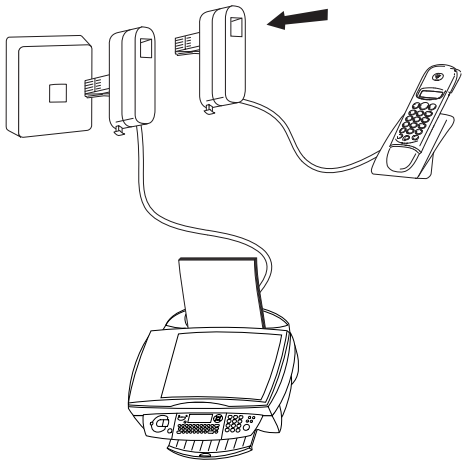

For all other countries

You can connect additional devices to the same telephone socket by using the socket labelled **EXT** on your machine.

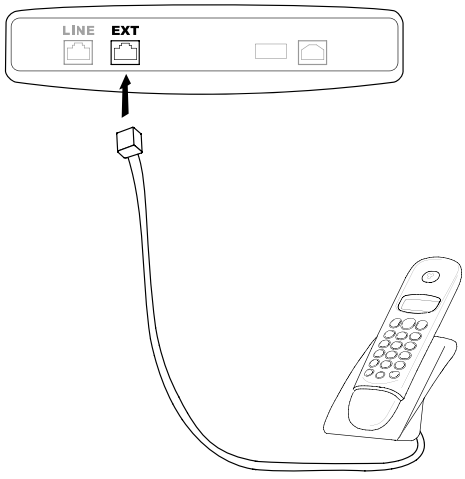

Separate sockets

You can connect additional devices to separate sockets on the same line even if they are in different rooms.

In the UK

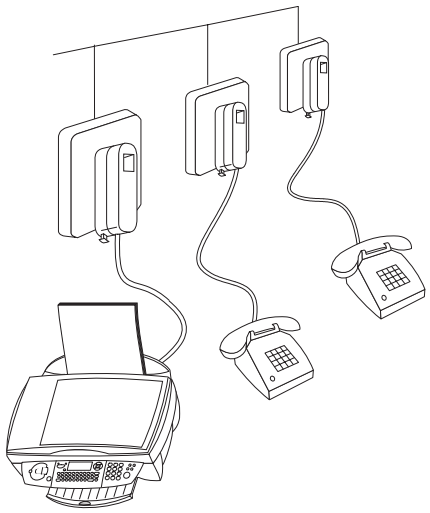

For all other countries

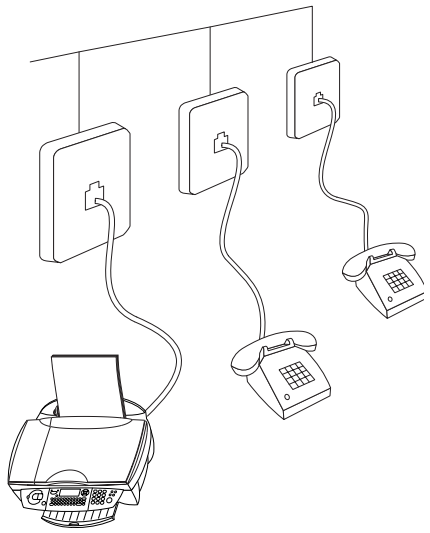

⚠ If you connect additional devices to separate sockets (e. g. in separate rooms) your fax switch cannot control them (which means that your multifunctional machine behaves like any ordinary machine). For this reason e. g. call transfer is not possible. Therefore we recommend you to connect your additional devices to the same socket.

⚠ For optimum performance of all the functions you should only register cordless handsets of the original type.

Original cordless handsets can be ordered using the enclosed order form or contacting the call center (see chapter **Hints & tips** / Ordering information).

Power supply

Connect the power supply unit to the back of your MF-JET 495 (at the side). Then use the mains cable to connect the power supply unit to the mains.

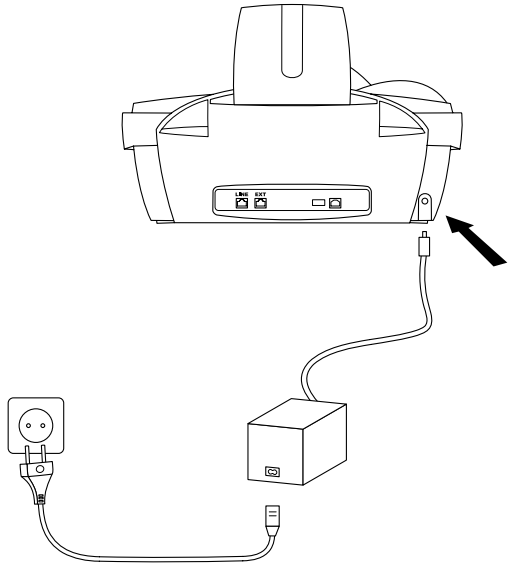

After you have connected the multifunctional device to the mains, it will prompt you to make some basic settings as follows:

Country selection

1 Press **OK**.

2 Use ▲/▼ to choose your country.

3 Press **OK** twice.

Inserting cartridges

Before you can receive or copy documents there must be ink cartridges in your MF-JET 495. Two starter cartridges (black and colour) have therefore been included to cover a few test pages.

1 Open the machine by pulling the lever under the control panel.

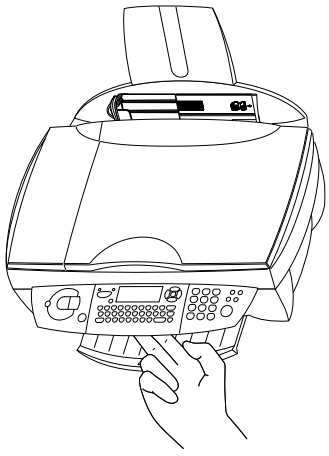

2 Press the lever in the middle of the cartridge holder to open the holder.

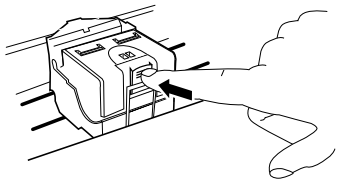

3 Take the ink cartridges out of their packaging and remove the protective strip.

> ⚠ Please make sure that the protective strip was removed completely.
>
> Be careful not to touch the nozzle or the contacts!

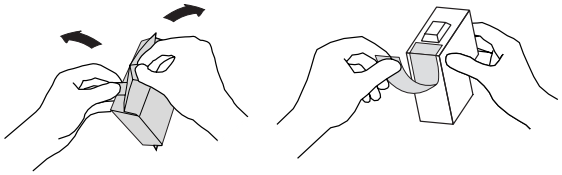

4 Insert the **black** cartridge "nose" down in the **right**-hand compartment of the cartridge holder.

5 Insert the **colour** cartridge in the same way in the **left**-hand compartment.

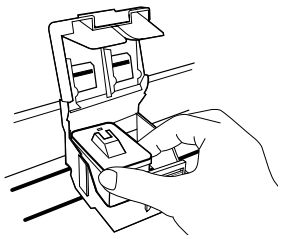

6 Close the cartridge holder. You'll hear a click when it snaps shut.

7 Close the machine.

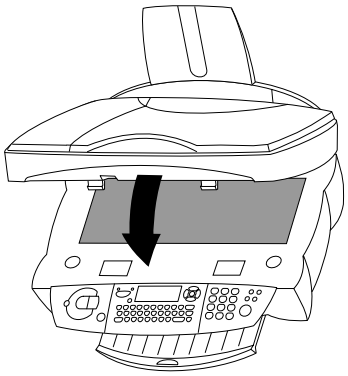

8 Push the supplied "Plug'n'Print" starter card with the contacts at the top into the slot under the control panel. This "Plug'n'Print" card is used for initialising the black cartridge and the colour cartridge.

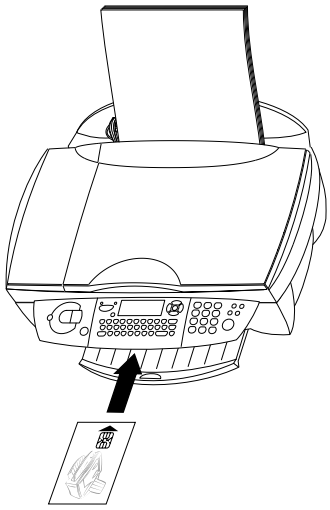

9 The cartridge is loaded when the following appears on the display: `ACTION COMPLETED`

`REMOVE CARD`

Repeat the process with the same card for the second cartridge.

Cartridge alignment

After the ink cartridges have been inserted your multifunctional machine will print a test page that will help you align the print heads of the two cartridges correctly. This is necessary to achieve the best possible print quality.

1 Use the number keypad to enter the number of the field in which the arrow appears clearest. `ENTER VALUE A`

2 Confirm with **OK** and repeat these steps for values B, C and D. `ENTER VALUE B`

Your number and name

1 Enter your fax number (max. 20 digits) and press **OK** (to enter a plus sign hold down the **CTRL** key and press **Q**; to enter a blank space, press the ␣ key).

2 Enter your name by using the keyboard for text input (max. 20 characters). The available special characters are shown above the letter keys on the right and can be entered by holding down **CTRL** and pressing the relevant key. To type capital letters, hold down ↑ and press the desired key. If you have entered a wrong digit or character, you can correct it with ▲/▼ and **C**. Press **OK**.

Date and time

Enter the date and time and confirm with **OK**, e. g. ①⑤ ⓪⑤ ⓪④ ①⑥ ③⓪ **OK** for May 15th 2004, 4:30 p. m.

PC connection

⚠ **First** install the software. Connect the MF-JET 495 to the PC with a USB cable **only when instructed to do so** by the installation program.

Minimum configuration

Your PC must have the following minimum configuration:

- Pentium processor, 200 MHz or higher
- Windows® 98 SE/2000/ME/XP and 128 MB RAM
- 300 MB free disk space for the complete installation
- USB port

⚠ You can connect your multifunctional machine to a Microsoft® PC (running the Windows® operating system). The machine is not compatible with Linux or Apple Macintosh®.

Software installation

The Software-Package contains:

1 "MF-Inkjet": installs your printer and scanner.

2 "Photo Impression": for creative processing and improved print quality for your digital photos.

3 "Paper Port": for quicker management of your scanned documents.

4 "Acrobat Reader": for display and printing of PDF data.

⚠ **First** install the software. Connect the MF-JET 495 to the PC with a USB cable **only when instructed to do so** by the installation program.

Before starting the installation program, close all open programs and applications. Installation starts automatically. (If the installation program does not start, find your CD-ROM drive in Windows® Explorer and double-click on Launch.exe.)

Installing all products

1 In the start window, click on "Install products".

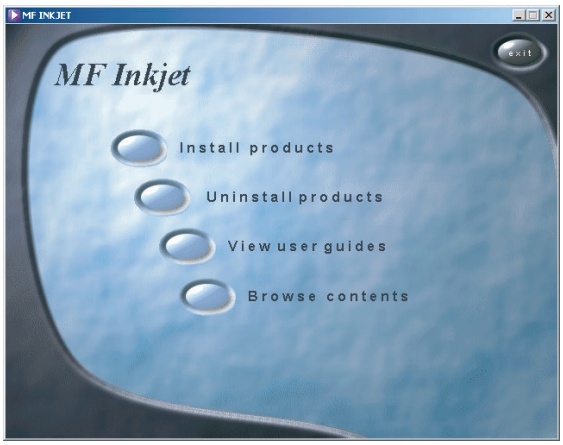

2 If you want to install all the products offered (scanner, printer, "Photo Impression", "Paper Port"), click on "All products".

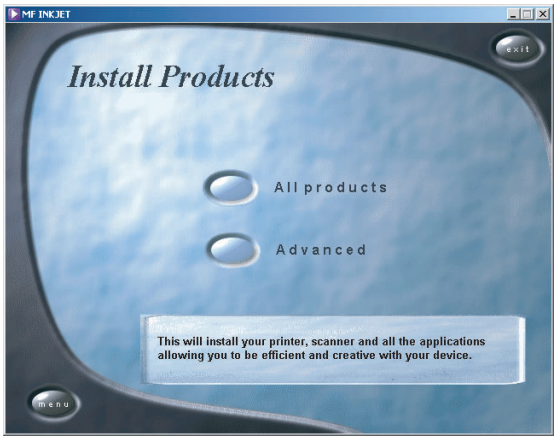
MF INKJET
exit
Install Products
All products
Advanced
This will install your printer, scanner and all the applications allowing you to be efficient and creative with your device.
menu

⚠ In this setting, "Acrobat Reader" must also be installed separately.

3 After "Photo Impression" has automatically installed you will be asked to accept the terms and conditions of the licence.

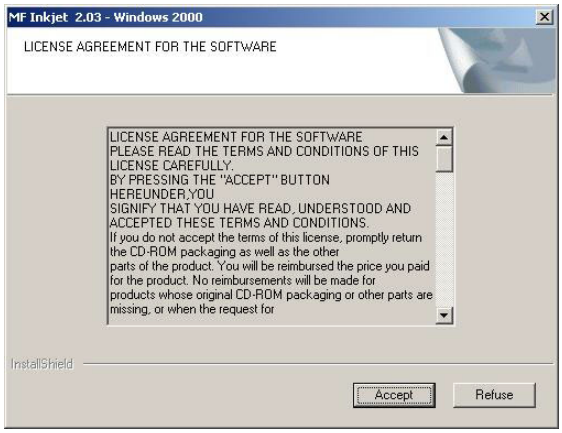
MF Inkjet 2.03 - Windows 2000
LICENSE AGREEMENT FOR THE SOFTWARE
LICENSE AGREEMENT FOR THE SOFTWARE
PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE CAREFULLY.
BY PRESSING THE "ACCEPT" BUTTON HEREUNDER,YOU
SIGNIFY THAT YOU HAVE READ, UNDERSTOOD AND ACCEPTED THESE TERMS AND CONDITIONS.
If you do not accept the terms of this license, promptly return the CD-ROM packaging as well as the other
parts of the product. You will be reimbursed the price you paid for the product. No reimbursements will be made for
products whose original CD-ROM packaging or other parts are missing, or when the request for
InstallShield
Accept
Refuse

4 If you have already connected the USB cable to the PC, remove it and click on "Next".

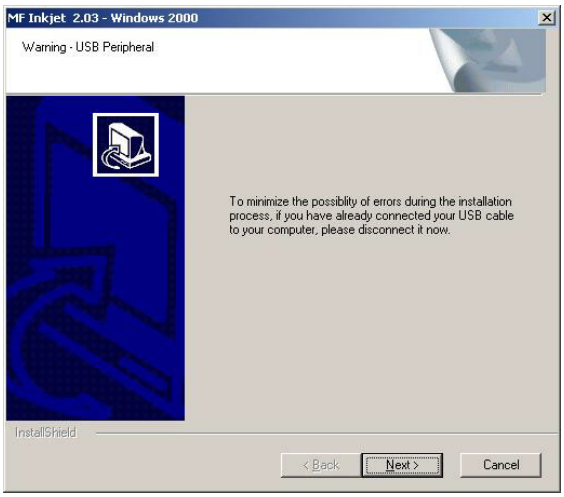
MF Inkjet 2.03 - Windows 2000
Warning - USB Peripheral
To minimize the possiblity of errors during the installation process, if you have already connected your USB cable to your computer, please disconnect it now.
InstallShield
< Back
Next >
Cancel

5 **Windows® XP:** If you receive a warning message that the peripheral hasn't passed Windows® Logo testing, choose "Yes".

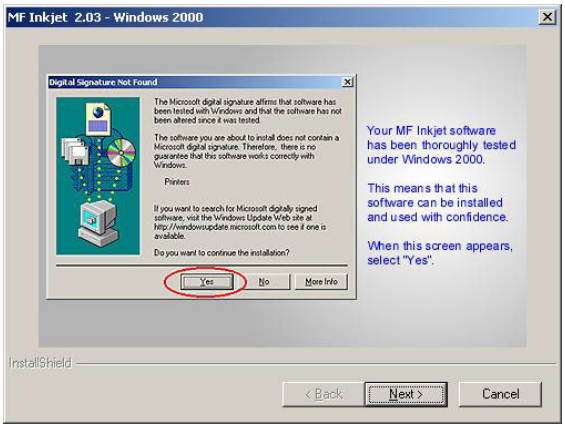
MF Inkjet 2.03 - Windows 2000
Digital Signature Not Found
Your MF Inkjet software has been thoroughly tested under Windows 2000.
This means that this software can be installed and used with confidence.
When this screen appears, select "Yes".
InstallShield
< Back
Next >
Cancel

⚠ Your multifunctional device has been tested for PHILIPS and is fully compatible with Windows® XP.

6 Follow the instructions on the screen, and connect the machine to the PC with a USB cable. Click on "Next" to confirm (high-speed systems will open the window described in **7** without confirmation).

The USB port is at the back of the machine.

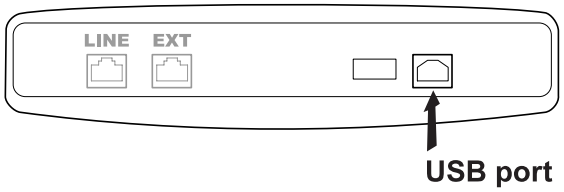

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install a device driver for a hardware device.
To continue, click Next.
< Back
Next >
Cancel

7 Click on "Next" to confirm. The installation program will automatically search for a suitable driver for your MF-JET 495.

Found New Hardware Wizard
Install Hardware Device Drivers
A device driver is a software program that enables a hardware device to work with an operating system.
This wizard will complete the installation for this device:
Unknown
A device driver is a software program that makes a hardware device work. Windows needs driver files for your new device. To locate driver files and complete the installation click Next.
What do you want the wizard to do?
Search for a suitable driver for my device (recommended)
Display a list of the known drivers for this device so that I can choose a specific driver
< Back
Next >
Cancel

8 Make sure the "CD-ROM drives" button is highlighted, and click on "Next" to confirm.

Found New Hardware Wizard
Locate Driver Files
Where do you want Windows to search for driver files?
Search for driver files for the following hardware device:
Unknown
The wizard searches for suitable drivers in its driver database on your computer and in any of the following optional search locations that you specify.
To start the search, click Next. If you are searching on a floppy disk or CD-ROM drive, insert the floppy disk or CD before clicking Next.
Optional search locations:
Floppy disk drives
CD-ROM drives
Specify a location
Microsoft Windows Update
< Back
Next >
Cancel

9 You can make special printer settings under "Document Defaults". Click on "Continue Installation" to install the printer driver.

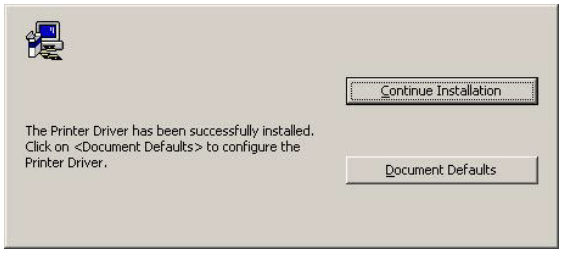
Continue Installation
The Printer Driver has been successfully installed.
Click on <Document Defaults> to configure the Printer Driver.
Document Defaults

10 You will be asked to restart your PC. Leave the installation CD in the drive. After the PC has restarted, installation is completed with "Paper Port".

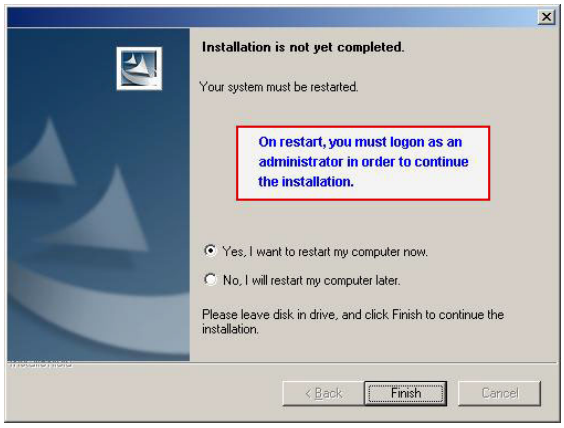
Installation is not yet completed.
Your system must be restarted.
On restart, you must logon as an administrator in order to continue the installation.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Please leave disk in drive, and click Finish to continue the installation.
< Back
Finish
Cancel

You can restart your PC at a later date so you can finish working in any programs that are still running.

Installing individual products

1 In the start window, click on "Install products".

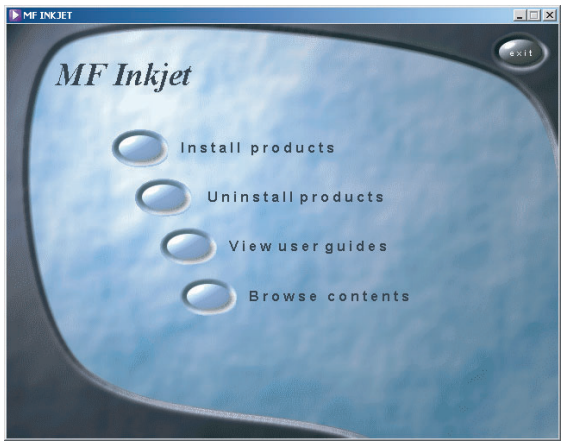

2 If you want to install specific products, click on "Advanced".

3 Select a product by clicking on relevant button.

Example: Installing "Photo Impression":

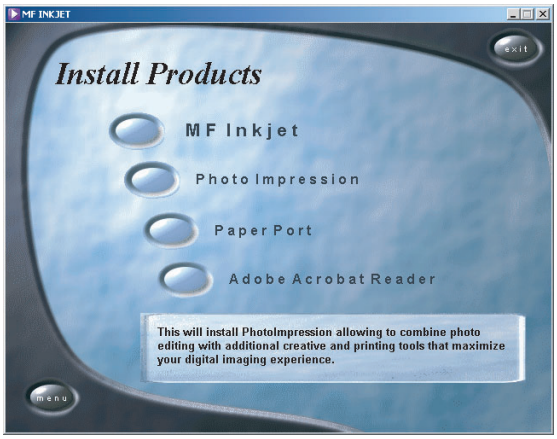
MF INKJET
exit
Install Products
MF Inkjet
Photo Impression
Paper Port
Adobe Acrobat Reader
This will install PhotoImpression allowing to combine photo editing with additional creative and printing tools that maximize your digital imaging experience.
menu

Click "Next" and follow the instructions on the screen. You will be prompted to accept a license agreement.

ArcSoft PhotoImpression Setup
License Agreement
Please read the following license agreement carefully.
ArcSoft
Press the PAGE DOWN key to see the rest of the agreement.
End User License Agreement
The following is a legal software license agreement between you, the software end user, and ArcSoft, Inc. Carefully read this license agreement before using the product. Using the product indicates that you have read this license agreement and agree to its terms.
Grant of License. This license permits you to use one copy of the software included in this package on any single computer. For each software licensee, the program can be "in use" on only one computer at any given time. The software is "in use" when it is either
Do you accept all the terms of the preceding License Agreement? If you choose No, the setup will close. To install PhotoImpression, you must accept this agreement.
InstallShield
< Back
Yes
No

The program offers you a default directory where "Photo Impression" will be installed. You can choose a different directory.

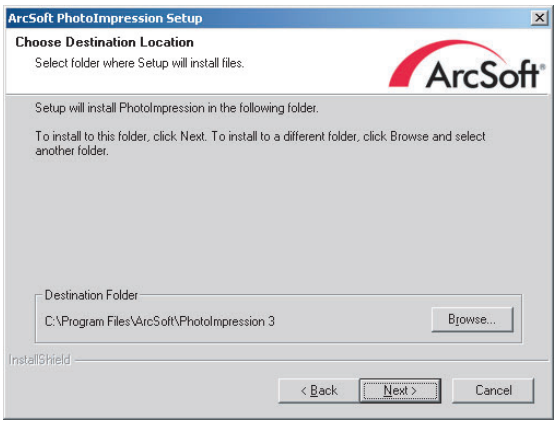
ArcSoft PhotoImpression Setup
Choose Destination Location
Select folder where Setup will install files.
ArcSoft
Setup will install PhotoImpression in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\ArcSoft\PhotoImpression 3
Browse...
InstallShield
< Back
Next >
Cancel

If you agree with the suggested directory name, click on "Next".

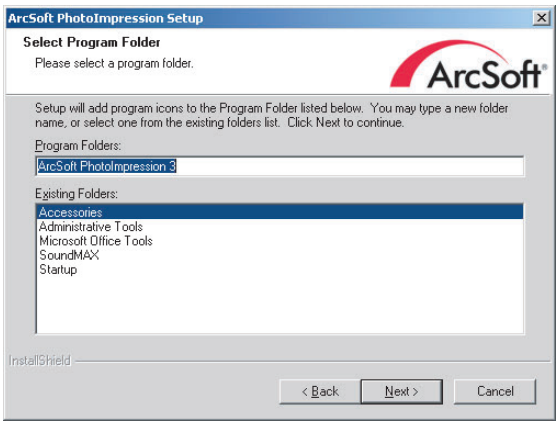

To complete the installation process for "Photo Impression", click on "Finish".

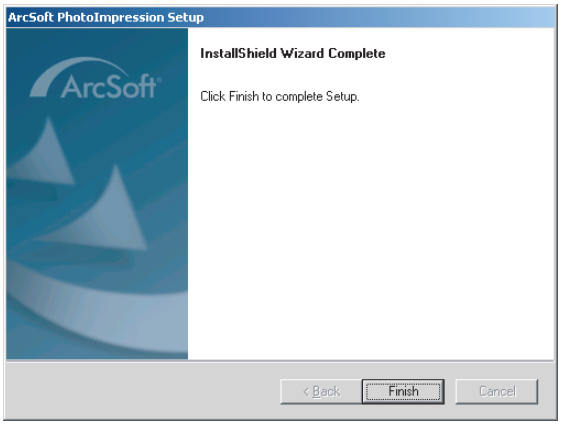

⚠ The installation CD will also guide you through the installation of "Paper Port", "MF-Inkjet" and "Acrobat Reader".

When you have finished installing "MF-Inkjet" you will be asked to restart your computer.

Operating instructions

To find out more about "Paper Port" and "Photo Impression", click on the "View user guides" button in the start window and select the relevant product. A PDF file gives you information on the selected product.

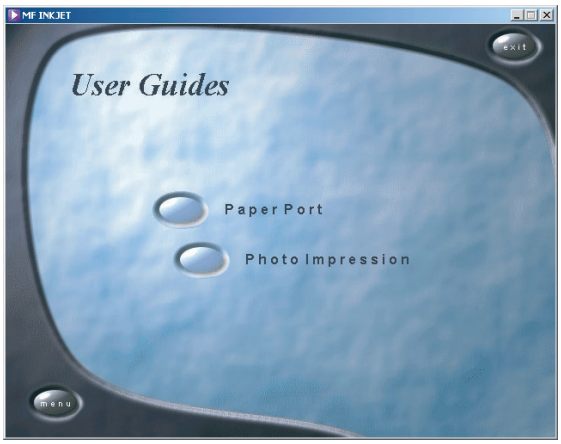

Contents of the installation CD

To find out what's on the installation CD, click on the "Browse contents" button in the start window.

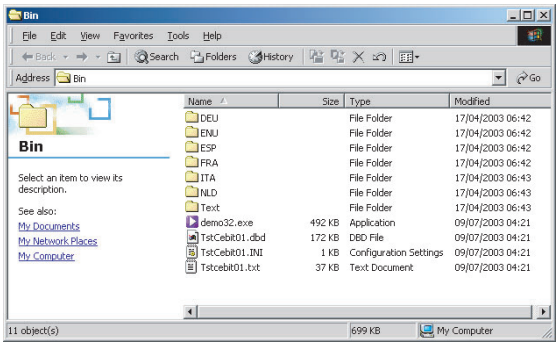
Bin
File Edit View Favorites Tools Help
Search Folders History
Address Bin
Bin
Select an item to view its description.
See also:
My Documents
My Network Places
My Computer
Name Size Type Modified
DEU File Folder 17/04/2003 06:42
ENU File Folder 17/04/2003 06:42
ESP File Folder 17/04/2003 06:42
FRA File Folder 17/04/2003 06:42
ITA File Folder 17/04/2003 06:43
NLD File Folder 17/04/2003 06:43
Text File Folder 17/04/2003 06:43
demo32.exe 492 KB Application 09/07/2003 04:21
TstCebit01.dbd 172 KB DBD File 09/07/2003 04:21
TstCebit01.INI 1 KB Configuration Settings 09/07/2003 04:21
Tstcebit01.txt 37 KB Text Document 09/07/2003 04:21
11 object(s)
699 KB
My Computer

Uninstalling the products

1 To delete a product once it has been installed, click on the "Uninstall products" button in the start window. If you want to uninstall all the products, click on "All".

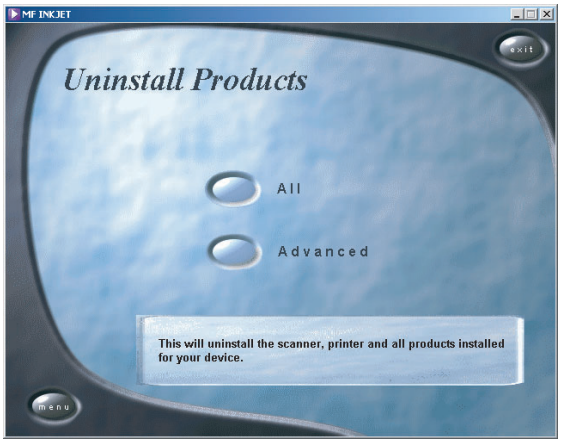

After "Photo Impression" has been uninstalled your "MF-Inkjet" device driver will be removed. Click on "Finish" to confirm. You will be asked to restart your PC and disconnect the USB link. Leave the CD ROM in the drive.

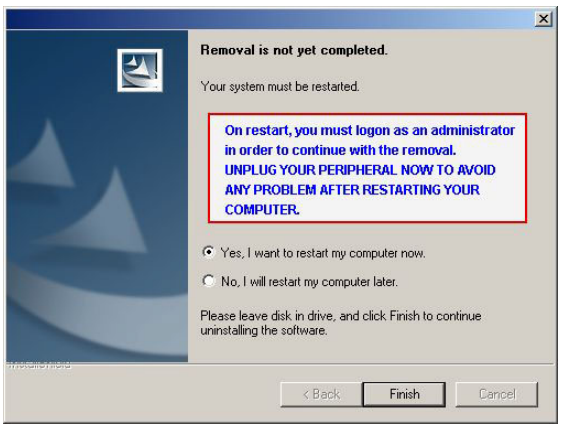
Removal is not yet completed.
Your system must be restarted.
On restart, you must logon as an administrator in order to continue with the removal.
UNPLUG YOUR PERIPHERAL NOW TO AVOID ANY PROBLEM AFTER RESTARTING YOUR COMPUTER.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Please leave disk in drive, and click Finish to continue uninstalling the software.
< Back
Finish
Cancel

You can restart your PC at a later date so you can finish working in any programs that are still running.

After the PC has restarted, the uninstall operation is completed with “Paper Port”. You can choose “Repair” or “Remove”. Follow the instructions on the screen.

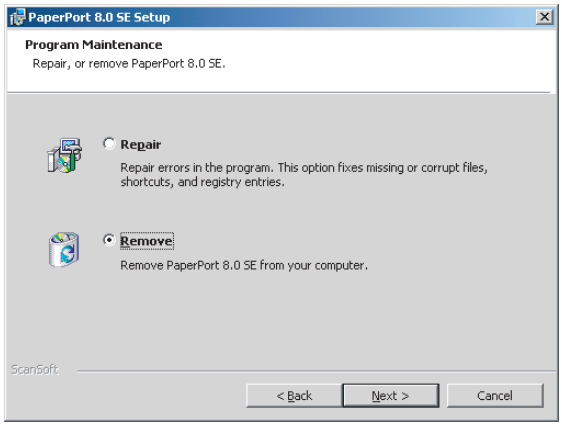
PaperPort 8.0 SE Setup
Program Maintenance
Repair, or remove PaperPort 8.0 SE.
Repair
Repair errors in the program. This option fixes missing or corrupt files, shortcuts, and registry entries.
Remove
Remove PaperPort 8.0 SE from your computer.
ScanSoft
< Back
Next >
Cancel

2 If you want to delete specific products, click on “Advanced”. The CD ROM will take you through the uninstall process for the selected product.

⚠ Click on “Menu” at any time to return to the start window.

Settings

You can print out a list of the current parameter settings by pressing **M**, ⑤④ and **OK**. To return to stand-by mode, press ⓥ as often as necessary.

If you want to delete or modify your individual settings, you can do so in the following functions.

Date and time

1 Press **M**, ②① and **OK**.

2 Enter the date and time and confirm with **OK**, e. g. ①⑤ ⓪⑤ ⓪④ ①⑥ ③⓪ **OK** for May 15th 2004, 4:30 p. m.

Your number and name

1 Press **M**, ②② and **OK**.

2 Enter your fax number (max. 20 digits) and press **OK**. (To enter a plus sign hold down the **CTRL** key and press **Q**; to enter a blank space, press the ␣ key.)

3 Enter your name by using the keyboard for text input (max. 20 characters). The available special characters are shown above the letter keys on the right and can be entered by holding down **CTRL** and pressing the relevant key. To type capital letters, hold down ↑ and press the desired key. If you have entered a wrong digit or character, you can correct it with ▲/▼ and **C**. Press **OK**.

⚠ "Your name" and "your number" are transmitted at the top of each page together with the date, time and page number, if you store this data with function 21 and 22.

Country and language

These settings will determine the language of the display and the local telephone network settings.

1 Press **M**, ②⓪① and **OK**. Use ▲/▼ to select your country. Press **OK** twice. It is important that you choose the country where you are using the machine as the machine has to adapt to local conditions!

2 To set the language, use ▲/▼ to select function 202»LANGUAGE and press **OK**. Choose with ▲/▼ and press **OK**.

⚠ The cordless handset automatically takes over the setting you have made on the base station.

HELP function ⓘ

Press ⓘ twice. You will receive a printout explaining how to use the most important functions. It also specifies how to obtain further HELP pages concerning other features of your machine.

ISDN connection

Your multifunctional device is not an ISDN device (group 4), but an analogue machine (group 3). Therefore it cannot be used directly on an ISDN connection. You will need an (analogue) adapter or an ISDN connection for analogue devices. For further information please refer to your ISDN instructions.

⚠ For devices with SMS function: Analog terminals must be SMS-compatible.

Network type (PABX)

Private branch exchange systems are very common in large companies. To get a connection from a private branch exchange to the public network you have to dial a key to obtain the outside line.

An additional telephone connected to a normal telephone line together with your MF-JET 495 must not be confused with a private branch exchange.

If you connect the MF-JET 495 to a PABX, you can set the prefix for an outside line.

1 Press **M**, ②⑤① and **OK**. Use ▲/▼ to select PABX and confirm with **OK**.

2 Select function 252»PREFIX using ▲/▼ and press **OK**. Enter the number of digits and press **OK**.

⚠ Take the longest internal number and add a further digit (e.g. if internal numbers are four digits long, enter 5).

3 Press the digit you need to reach an outside line. This is usually ⓪. Confirm with **OK**.

If the number of digits for an internal call is exceeded, the prefix for an outside line will be automatically added.

Set fax reception

The built-in fax switch separates fax transmissions from telephone calls. This means for example that the machine can receive faxes silently (without ringing signals) so you are not disturbed. The fax switch also monitors other connected devices.

1 Press **M**, ⑧⑤ and **OK**.

2 Enter the number of ringing signals with ▲/▼ after which the faxswitch should accept the call and separate faxes from telephone calls. Although the caller will continue to hear slightly different ringing tones after this time, charges will already have been accrued. FAX RINGS 3

3 Confirm with **OK**.

4 Press **M**, ⑧④ and **OK**.

5 Select number of total rings with ▲/▼. This is the number of ring tones before "silent" faxes can be received or a call can be accepted. TOTAL RINGS 5

6 Confirm with **OK**.

Display	Possible settings
TOTAL RINGS	0, 1, 2, 3, 4, 5, 6, 7
FAX RINGS	0, 1, 2, 3, 4, 5, MANUAL RECEPTION

⚠ If you cannot receive any faxes, you may have set both ringing signal numbers too high (see points **2** and **5**). Set both ringing signal numbers to values lower than five.

If you are using other devices apart from the multifunctional machine (telephones, answering machines), which are not connected by serial links, the ringing pattern may change as follows: Other devices ring as often as set under FAX RINGS. Your cordless handset will ring as often as set under TOTAL RINGS.

Special settings

Silent fax reception

To receive faxes immediately, set the number of FAX RINGS to 0 (zero). Your cordless handset will ring with a short delay because the fax switch has to check whether a fax is to be received.

Completely silent operation

If, for example, you do not wish to be disturbed by calls or faxes arriving at night, you may set the number of both ringing signals (TOTAL RINGS and FAX RINGS) to 0. In this setting your machine will switch immediately to fax reception and the cordless handset will not ring for incoming calls (the caller hears a whistling tone).

⚠ In this setting you cannot be reached by phone. You can only receive faxes. No messages will be recorded on your external answering machine.

Manual fax reception

If you select MANUAL RECEPTION then the fax will not be received automatically by your multifunctional machine, except you activate the fax reception by pressing ◇ (on the cordless handset: ⑤). This may be sensible for example, if you wish to receive your faxes by modem at your computer.

External answering machine

Connect your answering machine as described in chapter **Installation** / Additional devices.

To provide for the optimum performance of an external answering machine, set this device to ring once or twice. To avoid the automatic acceptance of calls by the faxswitch, you must set FAX RINGS and TOTAL RINGS to a value at least two ringing signals higher than the setting of the external answering machine.

If you switch off the external answering machine, calls are accepted by the faxswitch (see Set fax reception).

Settings example:

Answering machine rings	2
FAX RINGS	4
TOTAL RINGS	4

Tips:

The answering message of your answering machine should be shorter than ten seconds.

Please avoid music in your outgoing message.

If the automatic fax reception is impossible, press ◈ to manually begin receiving the fax.

If your answering machine provides an "economy function" (e.g. a function which changes the number of ringing signals as soon as a message was recorded), you should preferably switch this function off.

It is possible that the answering machine not only counts the messages received, but also the number of fax calls.

If your answering machine records fax signals but your multifunctional machine cannot receive faxes, you should check the connection of your external answering machine. Connect the external answering machine to the same telephone socket or to the **EXT** socket of your machine (see chapter **Installation** / Additional devices).

Cordless handset

Making a call

1 To make a call, enter the phone number and press the dial key.

2 To accept a call, again press the dial key.

3 To end a call, press.

⚠ If you have entered an incorrect digit, you can cancel it with **C** before dialling commences.

Redial

Your cordless handset stores the last ten numbers dialled.

1 Press **R** briefly.

2 You can now use ▲/▼ to select the number you want from the redial list on your cordless handset.

3 Press the dial key on your cordless handset to establish the connection.

Telephone book

You can store telephone numbers in the phone book on your cordless handset (max. 20 entries).

Storing numbers

1 Select function 11 by pressing ▲/▼, ①①.

2 Use the digit keys to enter a name. Press and hold the key as long as necessary until the character you want appears on the display. If you have made a mistake, press **C** briefly, then **OK**.

3 Enter the telephone number you want to store and press **OK**.

Using the telephone book

1 Press and use ▲/▼ to select the entry you want on your cordless handset.

To establish a connection to the other party, press the dial key.

2 Select BASE to access the base unit list, and confirm with **OK**. You can now make your selection from the entries on the base station.

To establish a connection to the other party, press the dial key.

Correcting entries

1 On your cordless handset, press ▲/▼, ①② and select with ▲/▼ the desired entry.

2 Press **OK** to edit the entry.

3 Delete the number or name using **C** and confirm the new entry with **OK**.

Deleting entries

1 On your cordless handset, press ▲/▼, ①③ and select with ▲/▼ the desired entry.

2 Press **OK** to delete the entry.

Calling line identification

(not available in all countries)

Your base station as well as your cordless handset are capable of showing the caller's telephone number. To have this feature at your disposal you must subscribe to it via your telephone service provider.

If a call had been received during your absence, the display on your cordless handset will show CALL. The telephone numbers of the last ten received calls are stored.

1 Hold down **R** on your cordless handset for two seconds. On the display appears: CALLS

2 Using ▲/▼ you can now step through the entries.

3 To call back the displayed number just press the dial key on the cordless handset.

Ring signal type

You have a choice of six ring tones on your cordless handset:

1 Select function 31 by pressing ▲/▼, ③① and **OK** on the cordless handset.

2 Now use ▲/▼ to select one of the ringing tones.

3 Confirm with **OK**.

Ringer volume

1 Select function 32 by pressing ▲/▼, ③②.

2 You can now use ▲/▼ to set the volume you want.

3 Confirm with **OK**.

Adjusting the call volume

During a telephone call press ▲/▼ and select the volume you want. Press **OK**.

Silent call reception

If, for example, you do not wish to be disturbed by calls you can disable the ring tones on your cordless handset with function 33.

Press ▲/▼, ③③ and select the option ON.

Audible signals

If you press any key on the cordless handset you will hear a short beep. You can disable the key tones in function 34 on your cordless handset.

Press ▲/▼, ③④ and select the option OFF with ▲/▼ and confirm with **OK**.

Muting

If you are making a phone call and want to talk to someone in the room without the person on the other end hearing, you can mute the cordless handset. Press **C** during the phone call. This switches off the microphone on the cordless handset, and the person on the other end will no longer be able to hear you. The loudspeaker on the cordless handset remains on, however, so you can still hear the other person. The total call duration is shown on the display. Press **C** again to carry on the call.

You can also mute your cordless handset entirely. If you press **OK** during a call, both the microphone and the loudspeaker on the cordless handset will be switched off. The symbol on the display will start to flash. Press **OK** again to carry on the call.

Internal phone calls

If you have registered more than one cordless handset on your base station you can make internal calls between two handsets.

Press the number of the cordless handset you wish to call (for example ②) and the dial key . Press the button to end the call.

Press ✱ and to call all the handsets registered on your base station.

Additional telephone

Your multifunctional machine is equipped with a cordless handset. You can also connect further telephones to the same telephone line (see chapter **Installation** / Additional devices). However, the additional phone must be set to dual-tone multi-frequency method. If your telephone connection requires the pulse dialling method, then you would need to briefly reset your additional device to use it. For more information about this, please see the user manual for your device.

There are two ways in which you can forward a call from your cordless handset to an additional cordless phone, depending on the type of call (see following table).

⚠ For optimum performance of all the functions you should only register cordless handsets of the original type.

Original cordless handsets can be ordered using the enclosed order form or contacting the call center (see chapter **Hints & tips** / Ordering information).

Incoming call	Cordless handset	Base station	Other telephone
You want to accept a call.	Press the dial key both for an external call and for a call that is forwarded by your base station or another cordless handset.	Not possible!	Depending on the type of telephone.
You lift the handset and it's an incoming fax (you hear a beep or nothing at all).	Press 📖 or combination ✱⑤.	Press ◈.	Press ✱⑤ and hang up.
You want to forward a call.	To an additional cordless handset that is also registered to the base station: For an external call press **OK**, the number of the handset you want (e. g. ②) and the dial key, then hang up with. For an internal press **OK**, the number of the handset you want (e. g. ②) and the dial key.	Not possible!	Not possible!

Locate the cordless handset

If you have mislaid your cordless handset or additional cordless phones you can use function 83 to find them.

On the base station press **M**, ⑧③ and **OK** twice . All the cordless handsets registered on the base station will then ring for about one minute.

When you have found your handset press ▽ on the base station or on the cordless handset to stop it ringing.

Switching on and off

You can switch the cordless handset off to save power. To switch the handset off hold down the button for at least three seconds. To switch the handset back on again hold down the button for at least three seconds.

Fax

Sending a fax ◈

1 Open the scanner cover. Please make sure that the scanner glass is clean before placing the original document (see chapter **Hints & tips** / Care and maintenance).

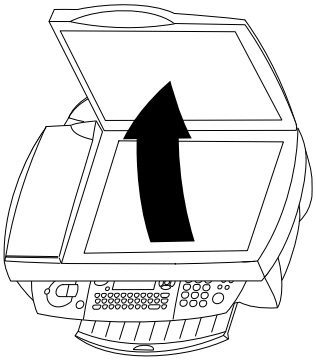

2 Place the document **face down** onto the scanner glass.

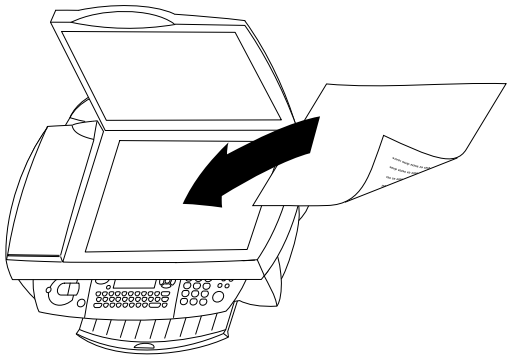

3 Align it with back left corner of the scanner glass (marked with arrows).

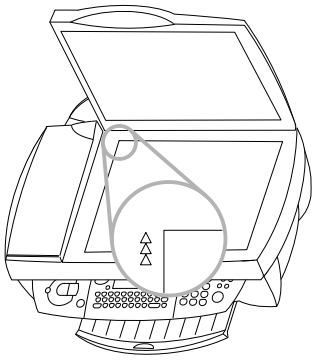

If you want to scan small three-dimensional objects (such as coins or flowers), use transparent film to protect the scanner glass.

⚠ If your machine produces horizontal strips, the scanner may be blocked (see chapter **Hints & tips** / Horizontal stripes).

4 Choose a fax number and press ◈. Wait until the warm-up phase has come to an end and the document has been scanned into the memory.

5 If you want to send just one page, use ▲/▼ to choose DONE and press **OK**. If you want to fax more than one page, insert another page and select NEXT PAGE. Then press **OK**.

If the number called is busy, it will be redialled automatically after a certain time.

After transmission, the MF-JET 495 will automatically print a send report. This function can be deactivated (see Send report).

If you want to cancel the transmission, press ⊘ twice.

Directory A-Z 🕮

The memory in your MF-JET 495 can store about 200 names and number. The precise number depends on the length of the entries.

In the list you can store individual entries (names and numbers) and groups (comprising several entries).

The available special characters are shown above the letter keys on the right and can be entered by holding down **CTRL** and pressing the relevant key (e. g. hold down **CTRL** and press **W** to type a hyphen).

When entering a name, you can use ↑ to type capital letters (press and hold the ↑ key and type the desired key).

With ▲/▼ you can move the cursor within an entry and with ← you can delete a character.

Add name

Follow the instructions on the display to store an entry in the list:

1 Press **M**, ①① and **OK**. Enter a name and press **OK**. Enter a fax number and press **OK**.

2 The MF-JET 495 automatically assigns a number to the record. To modify this number enter the digit required and press **OK**.

3 Use ▲/▼ to choose W.ASSOC.KEY if you want to assign a shortcut key (letter) for quick access to the record. Press **OK**.

4 If necessary, you can set a different transmission speed for sending faxes. If the line quality is good, confirm the default maximum speed. Press **OK**.

The entry is saved. To call up a saved entry, press **A-Z** 🕮 and use ▲/▼, a number key or letter key to select the desired list entry. The list of your stored contacts will be printed out.

Add group

You can group several directory entries together e.g. to send a fax to several persons.

1 Press **M**, ①② and **OK**. Enter a name for this group and press **OK**.

2 Press a shortcut number, a letter or use ▲/▼ and **OK** to select entries to add them to the group. Press **OK**.

3 The group ID number will automatically appear on the display. If you wish to modify this number, you may do so. Confirm with **OK**.

Modify

1 Press **M**, ①③ and **OK**.

2 The directory appears in alphabetic order. Use ▲/▼ to select the entry or group you wish to modify. Press **OK**.

3 Modify the entry and confirm each step with **OK**.

Cancel

1 Press **M**, ①④ and **OK**.

2 The directory appears in alphabetical order. Use ▲/▼ to select the entry or group you wish to delete.

3 Press **OK**.

4 Confirm with **OK**.

Print

Press **M**, ①⑤ and **OK**. The directory is printed in alphabetical order.

Transfer to a PC

If you have connected your MF-JET 495 to a PC, you can transfer the directory to the PC to edit it.

On your PC, click on Start > Programs > MF Inkjet > Restore Address Book.

You can transfer the directory from the PC to the MF-JET 495 (and vice versa) by clicking on the icons on the bottom of the window.

You can add and edit specific entries in the register window named “Entry”.

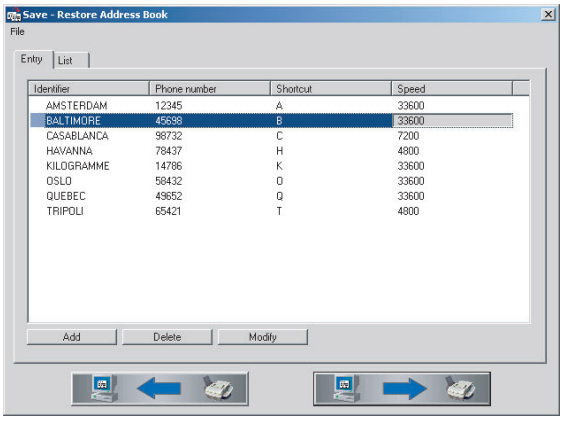

You can edit groups in the register window named “List”.

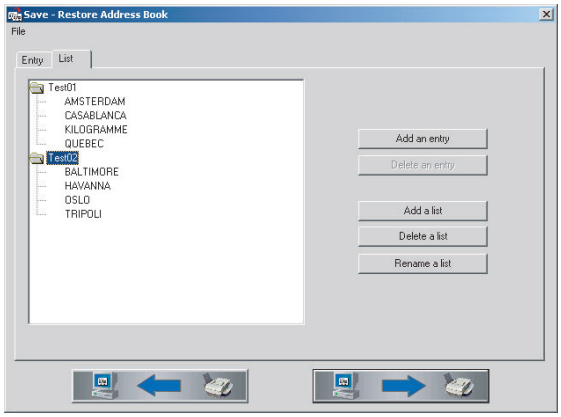

Use directory

1 Insert a document.

2 Press **A-Z** 🕮 and use ▲/▼, on the base station to select name and number or use the keyboard to enter a name and then select the record.

3 Press ◇ to start the transmission.

Redial

The last ten numbers dialled on the MF-JET 495 will be stored in the redial memory.

1 Insert a document.

2 Press ● as often as necessary. When the desired number appears on the display, press ◇ to start the transmission.

Broadcast

You may choose to send a document to several recipients.

1 Insert a document.

2 You now have the following options for entering numbers in the recipient list: Enter them via the numeric keypad or select a number/group from the list A-Z or use . Press , and enter further numbers (maximum of ten). Press .

3 If you want to cancel the transmission, press twice.

Resolution

To change the resolution, keep pressing until the desired arrow symbol (▼) is highlighted on the display with ■. If none of the three arrow symbols is highlighted on the display, the machine is in standard resolution.

standard—for good quality documents, without drawings or small details

F—for documents with drawings or small characters

SF—for documents with very fine or small drawings

—for photos

Contrast

If the document is too light or too dark, you may change the contrast. Press as many times as necessary to choose the desired contrast. The current setting is shown on the display.

Receiving faxes

If you have not changed the settings for fax reception, faxes will be automatically received. (For instructions on how to change the settings for fax reception see chapter **Advanced settings** / Fax settings.)

If there is no more paper in the feeder or if the cartridge is empty, incoming faxes will be stored in memory (storage capacity approx. 50 pages). If the memory is full, no further pages can be stored and certain functions can no longer be performed. To empty the memory insert paper or a cartridge and start printout of the faxes by pressing .

⚠ When a fax message is completely printed out, it will be deleted from the memory. If the printing process was interrupted, all fax messages that have not been completely printed out will remain stored.

Memory lock

The memory lock stores the documents that cannot be printed out immediately (see Receiving faxes) or that are not to be printed out. They need not be printed as soon as you receive them. The symbol on the display lets you know the state of the memory lock:

on—memory lock feature enabled

flashing—documents are in the memory or are being received

off—memory is full or you have disabled automatic fax reception

To prevent faxes from being printed out by the wrong person, you can protect access with a four-digit answer code. Once stored, this code is required to print fax messages and to activate/deactivate the memory lock.

Storing an answer code

Press **M**, ③④③ and **OK**. Enter a four-digit code and press **OK**.

Activate/deactivate

Press **M**, ③④② and **OK**. If you have stored an answer code, enter it and press **OK**. Use ▲/▼ to select WITH or WITHOUT and press **OK**.

Printing messages

Press **M**, ③④① and **OK**. If you have stored an answer code, enter it and press **OK**. Documents received and stored in the memory are printed and then deleted from the memory.

Send report

The MF-JET 495 can print a send report every time you have sent a document. This way you are given confirmation that your document has been received.

1 Press **M**, ②③① and **OK**. Select one of the following options:

WITH—a report is printed out after every successful transmission (even if the called number was busy).

WITHOUT—no send report; however, your MF-JET 495 notes all transmissions that took place in its log (see chapter **Hints & tips** / Logs).

ALWAYS—a report is printed out after every transmission (even if the transmission was unsuccessful because of a fault).

ON ERROR—a report is only printed if the transmission fails or is abandoned.

2 Confirm with **OK**.

Delayed transmission

If you wish to make use of cheaper telephone rates, or if your fax correspondent is only available at particular times, you can program automatic transmission of a fax at a later time (within 24 hours).

1 Press **M**, ③① and **OK**.

2 Enter the fax number and press **OK**.

3 Enter the time you want the fax to be sent (within 24 hours), e. g. ①⑦ ③⓪ for 5:30 p. m. Press **OK**.

4 Set the contrast and other settings and confirm each entry with **OK**.

Polling

By means of this function documents which have been prepared for collection from another machine can be retrieved. You can also allow a document to be polled from your multifunctional machine.

Polling reception

1 Press **M**, ③② and **OK**.

2 Enter the polling number and press ◇.

Delayed polling

1 Press **M**, ③② and **OK**.

2 Enter the polling number and press **OK**.

3 Enter the time you wish to poll the document (e. g. ①⑦ ③⓪ for 5:30 p. m.) and press ◇.

Polling transmission

You may place a document in your MF-JET 495 and make it available to one or more recipients who can obtain a fax of this document by calling your MF-JET 495 with the polling function.

1 Insert the document on the scanner glass.

2 Press **M**, ③③ and **OK**.

3 Use ▲/▼ to choose between the two options:

SIMPLE—the document may be transmitted only once (from the memory). Press **OK**.

MULTIPLE—the document may be polled as many times as necessary (from the memory). Press **OK**.

4 If necessary, adjust the contrast and press **OK**.

5 Enter the number of pages and press **OK**.

6 Wait until the warm-up phase has come to an end and the document has been scanned into the memory. Press **OK**. The document is ready for polling.

Copy

Inserting a document

1 Open the scanner cover. Please make sure that the scanner glass is clean before placing the original document (see chapter **Hints & tips** / Care and maintenance).

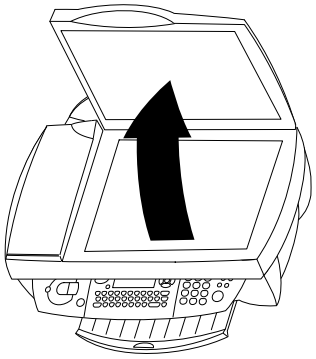

2 Place the document **face down** onto the scanner glass.

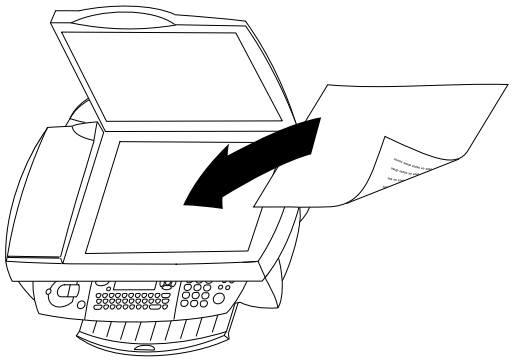

3 Align it with back left corner of the scanner glass (marked with arrows).

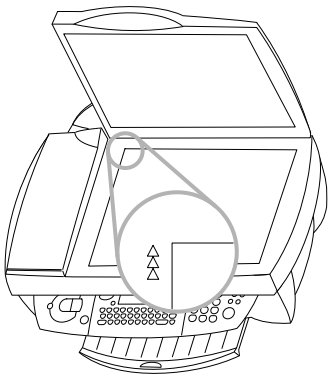

If you want to scan small three-dimensional objects (such as coins or flowers), use transparent film to protect the scanner glass.

⚠ If your machine produces horizontal strips, the scanner may be blocked (see chapter **Hints & tips** / Horizontal stripes).

Standard copy

1 Insert a document (see Inserting a document).

2 Press one of the two keys (copy in colour or black and white) **twice**.

Optional copy

1 Insert a document (see Inserting a document).

2 Press one of the two keys (copy in colour or black and white) **once**. You can now make the following settings:

3 Enter the desired number of copies and press **OK**. NUMBER OF COPIES

4 The copying quality of the MF-JET 495 is higher than the resolution used for fax transmission. If necessary, change the default setting with ▲/▼ or : »RESOL.:NORMAL

FAST—for good quality documents, without drawings or details

NORMAL—for documents with drawings or small characters

QUALITY—for maximum resolution

Press **OK**.

5 Your MF-JET 495 can reduce or magnify a specific part of a document from 25 % to 400 %. Set the desired zoom value with the key pad and press **OK**. ZOOMING

6 You can change the origin of the scanner. (The origin is set at the factory in the back left-hand corner, marked with arrows.)

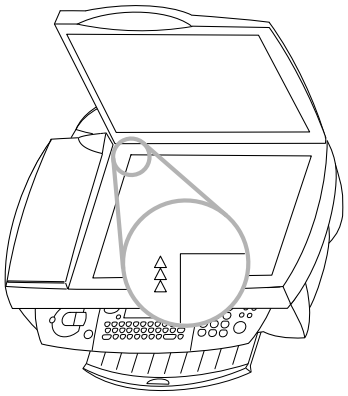

By entering new values of x and y given in millimetres, you will move the scanning zone as shown on the figure below. Confirm the entries with **OK**. ORIGIN

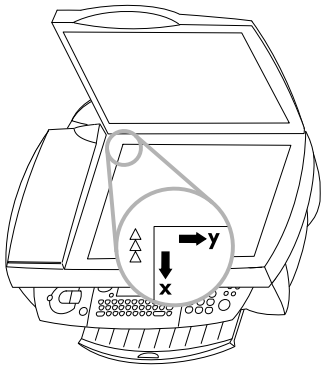

7 If the document is too light or too dark, you may change the scanning contrast. Press ▲/▼ or ◑ as many times as necessary to choose the desired contrast, as shown by the position of the cursor. Press **OK**. CONTRAST

8 For colour copying: You can adjust the saturation. Colour saturation is judged in proportion to brightness. Use ▲/▼ to change the setting: **−** is more grey, **+** is more saturated. Confirm with **OK**. SATURATION

9 For colour copying: If you have chosen colour copy, you can adjust the RGB values. All colours can be defined as combinations of red (R), green (G) and blue (B). You can change the values for each of these basic colours with ▲/▼. Press **OK**. RGB

10 You can adjust the luminosity (brightness) of the printer. Use ▲/▼ to change the setting: **−** is darker, **+** is lighter. Press **OK**. LUMINOSITY

11 Use ▲/▼ to set whether you use plain, coated, or photo paper, or transparent film and press **OK**. »NORMAL PAPER

Scan to PC

You can use the MF-JET 495 to scan documents and edit the document with a PC (see **Installation** / PC connection).

Inserting a document

1 Open the scanner cover. Please make sure that the scanner glass is clean before placing the original document (see chapter **Hints & tips** / Care and maintenance).

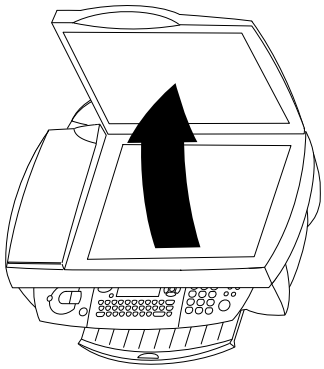

2 Place the document **face down** onto the scanner glass.

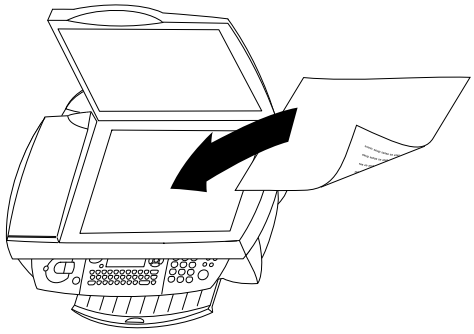

3 Align it with back left corner of the scanner glass (marked with arrows).

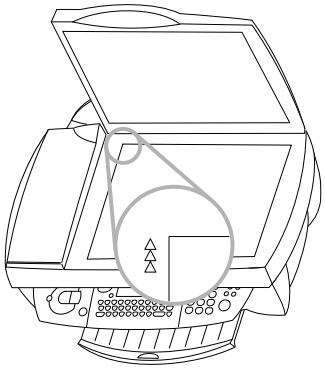

If you want to scan small three-dimensional objects (such as coins or flowers), use transparent film to protect the scanner glass.

⚠ If your machine produces horizontal strips, the scanner may be blocked (see chapter **Hints & tips** / Horizontal stripes).

Scanning a document

There are three ways to scan a document via PC:

Variant 1

Press (on the multifunctional device) to open the scan window on the PC.

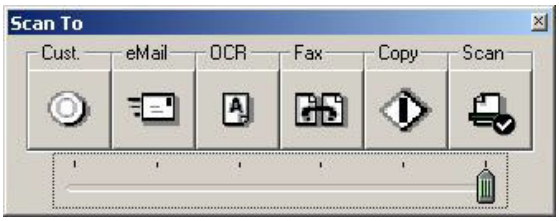

This window enables you to choose between a number of different ways of processing documents. You do this by clicking on the required symbol:

Cust.: The scanned document can be edited in "Paint".

eMail: The scanned document can be sent as an e-mail attachment.

OCR: Using the OCR (Optical Character Recognition) software supplied on your installation CD, you can change or correct the scanned document and convert it for use in other programs.

Fax: The scanned document can be faxed.

Copy: The scanned document can be copied and printed.

Scan: If you have installed the "Paper Port" program, your document will be scanned and input directly into the "Paper Port" application (see chapter **Installation** / Software installation).

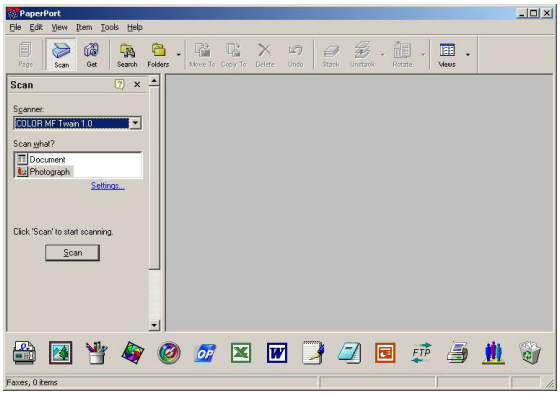

Variant 2

Clicking on the "One Touch" symbol in the menu bar on the bottom right of your PC screen (next to the time) opens the following window:

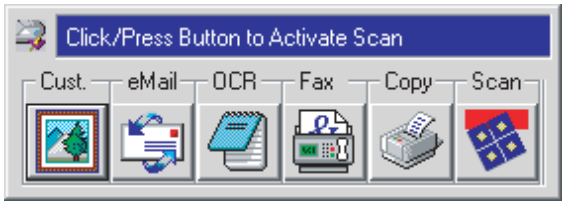

As for the **Variant 1**, a number of different ways of processing documents are available to you. In addition, you can select special settings for the application in question (select the required symbol and click the right mouse button).

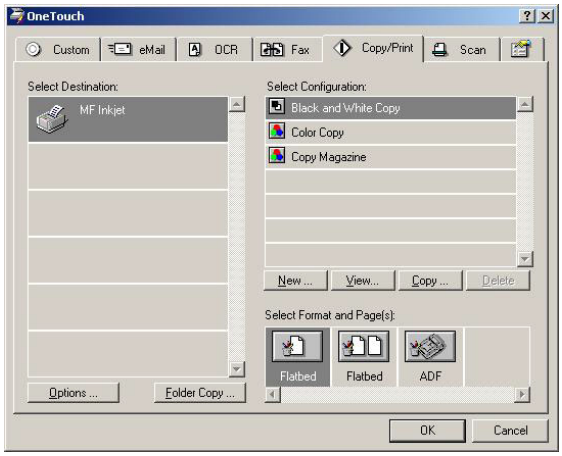

You can combine multiple pages into one document or save in different documents. Change the factory default under "Select Format and Page(s):" by clicking on the appropriate symbol.

Variant 3

To scan a document, open a graphic application ("Paper Port" or "Photo Impression") and choose the scan function. Choose the MF-TWAIN driver to start scanning.

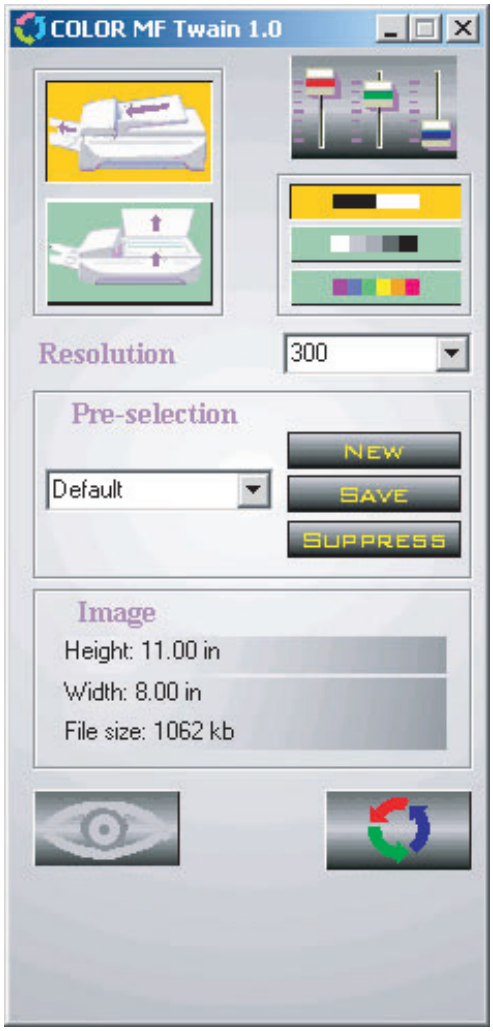

⚠ To view and edit the document you have scanned, first close the MF-TWAIN driver.

Click on the lower left icon to create a preview, click on the lower right icon to start scanning.

Click on "Pre-selection" to create different profile for different document types you want to scan. A profile contains all important settings for a certain type of document. To create a profile, first make all settings and then choose "New" profile. Enter a profile name and click "Save".

Print

Select "Print" and choose the "MF-Inkjet" as your printer if it is not already set as the default device. Click on "Properties" to change the existing settings.

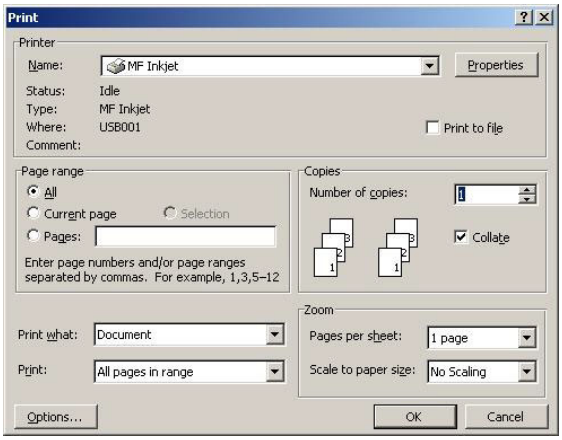

Select the paper size, orientation and number of copies.

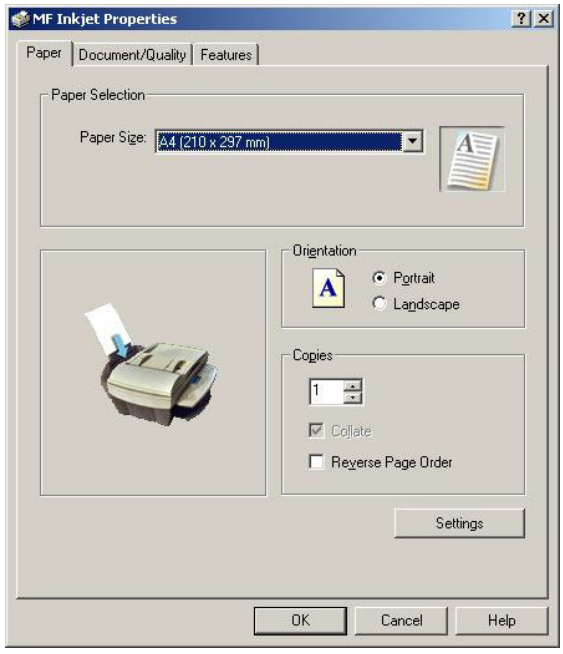

Select the paper type and the print quality.

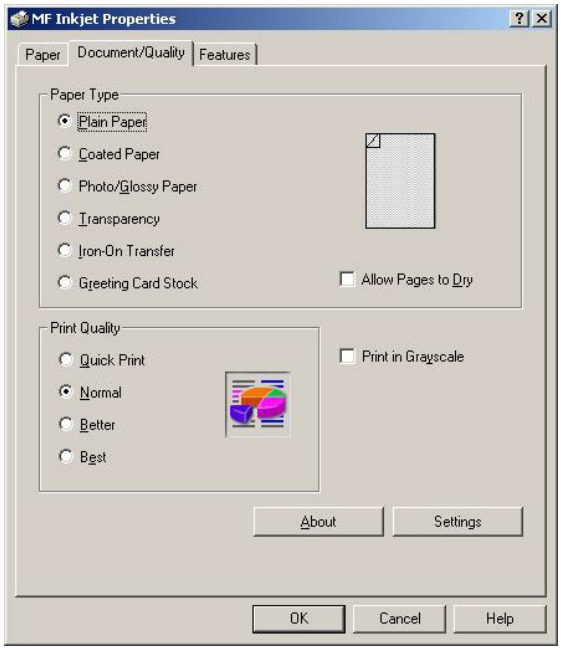

Click on "Settings" to create or select a profile.

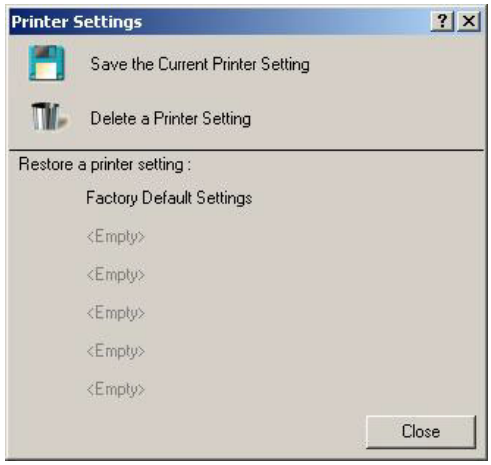

Select the document layout, i.e. how the pages are to be arranged on the sheet.

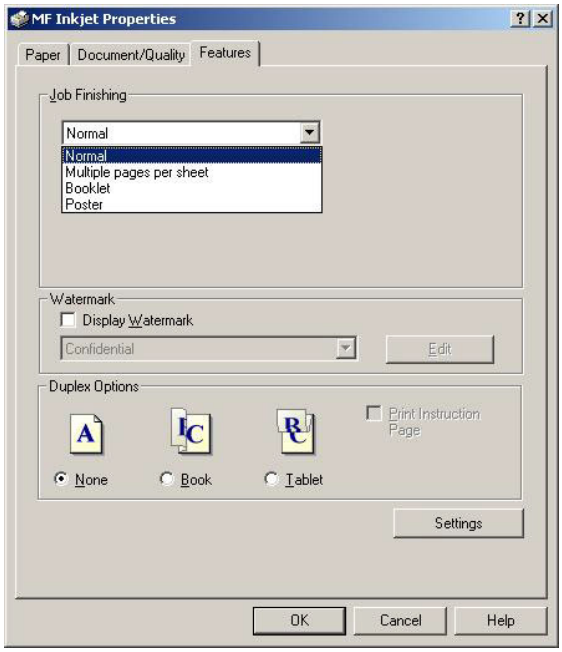

During printing, the "Printer monitor" window is displayed showing the status of the printer.

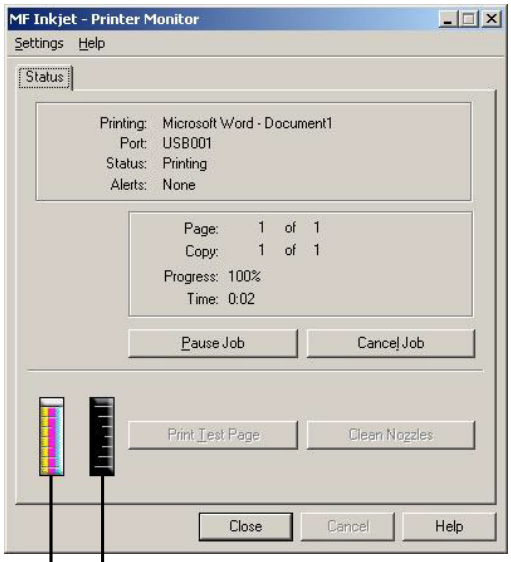

The layout of the printed documents also depends on the layout settings in the software you are using. For more details, refer to the documentation or help for that software.

SMS

(not available in all countries)

You can send and receive SMS (Short Message Service) messages with your multifunctional machine. Your MF-JET 495 has been pre-set to use the SMS service in your country. If it does not work correctly, please contact your SMS service provider and change these settings (see **Advanced settings** / SMS settings).

> ⚠ You cannot send or receive SMS messages on your cordless handset.

- Before you can send and receive SMS messages the CLIP feature (Caller Line Identification Presentation) must be enabled for your telephone line.
- Make sure that this feature is activated on your line.
- To send an SMS the call number of an SMS provider must be entered in your base station (SMS centre).

Check the following with your service provider:

- what costs are billed for sending and possibly receiving an SMS message,
- which mobile networks can you send SMS messages to and which mobile networks can you receive SMS messages from,
- which functions are offered by your SMS service.

Sending an SMS ✉/📄

One recipient

1 Press ✉/📄 twice (or **M**, ④① and **OK**).

2 Type the message you want to send.

The available special characters are shown above the letter keys on the right and can be entered by holding down **CTRL** and pressing the relevant key. To type capital letters, hold down ↑ and press the desired key. You can move the cursor with ▲/▼ and delete characters with ←.

3 Press ✉/📄.

4 Enter the recipient's telephone number.

5 Press ✉/📄 to send the message. The MF-JET 495 will print a send report.

This function can be deactivated (see chapter **Fax** / Send report).

Directory A-Z 🕮

1 Press ✉/📄 twice (or **M**, ④① and **OK**).

2 Type your message and press ✉/📄.

3 To select a number from the directory, press A-Z 🕮 and use ▲/▼ to select an entry.

4 Press ✉/📄 to send your message.

Redial

The last ten numbers dialled on the MF-JET 495 will be stored in the redial memory.

1 Press ✉/📄 twice (or **M**, ④① and **OK**) and type your message.

2 Press ✉/📄.

3 Press as often as necessary, until the desired number appears.

4 Press ✉/📄 to send your message.

Several recipients

1 Press ✉/📄 twice (or **M**, ④① and **OK**) and type your message.

2 Press ✉/📄 and enter the first telephone number.

3 Press and enter another telephone number (max. ten).

4 Press ✉/📄 to send your message.

Receiving an SMS

Received SMS messages will be printed automatically. (You can change this setting—see chapter **Advanced settings** / SMS settings.) If you switch off automatic printing, messages will be stored in the memory. If you have received an SMS message the lamp above the ✉/📄 button lights up on the base station and the ✉ symbol flashes on the cordless handset.

Reading an SMS

1 Press ✉/📄 and **OK** (or **M**, ④② and **OK**).

2 Use ▲/▼ to choose a message and press **OK**.

3 You can scroll up and down within the message with ▲/▼.

Printing an SMS

1 Press ✉/📄 and 📄 (or **M**, ④④ and **OK**).

2 Use ▲/▼ to select which SMS messages you want to print:

SELECTED—Press **OK**, and use ▲/▼ to select the SMS message to be printed out. Confirm with **OK**.

NEW—Press **OK**. The newly arrived SMS messages will be printed.

ALL—Press **OK**. All SMS messages will be printed.

Deleting an SMS

1 Press **M**, ④③ and **OK**.

2 You can now choose which messages to delete using ▲/▼:

SELECTED—Press **OK** and choose the messages to delete using ▲/▼. Confirm with **OK**.

ALREADY READ—Press **OK** to delete the messages that you have already read.

ALL—Press **OK**. All messages will be deleted.

Advanced settings

Settings list

You may print a list of your MF-JET 495's parameter settings to monitor any changes made to the default parameters!

Press **M**, ⑤④ and **OK**.

Fax settings

Number of copies

You may print incoming documents more than once.

Press **M**, ②④② and **OK**. Enter a number (1 to 99) and press **OK**.

Sorted printing

When you receive documents of several pages, they will be received in the memory and then printed out in the correct order. You can avoid this by de-activating sorted printing:

Press **M**, ②④③ and **OK**. Use ▲/▼ to choose WITH (sort function) or WITHOUT (sort function) and press **OK**.

SMS settings

When you select your country when setting up the MF-JET 495, the parameters for SMS emission and reception will be pre-set. If these settings do not work or if you want to use another provider, you will need to change these settings. Your SMS service provider will provide the numbers you need.

SMS emission

1 Press **M**, ④⑥①① and **OK**.

2 Enter the provider number your machine has to dial to send SMS messages. Press **OK**.

SMS reception

1 Press **M**, ④⑥①② and **OK**.

2 Enter the provider number to receive SMS messages. Press **OK**.

SMS alternative reception

You might wish to receive SMS from a second provider. In that case you will have to enter a second provider number to receive SMS messages.

1 Press **M**, ④⑥②① and **OK**.

2 Enter the second provider number for SMS reception and press **OK**.

Automatic printing

Press **M**, ④⑤① and **OK**. Use ▲/▼ to choose whether SMS messages should be printed out automatically or not and press **OK**.

Beep

Press **M**, ④⑤②, **OK**. Use ▲/▼ to choose whether the MF-JET 495 should emit a beep to notify you when an SMS message is received and press **OK**.

Sender name

Press **M**, ④⑤③ and **OK**. Use ▲/▼ to choose whether SMS messages that you send should include your name. Confirm with **OK**.

> ⚠ "Your name" and "your number" are transmitted at the top of each page together with the date, time and page number, if you store this data with function 21 and 22.

Scan settings

With the following functions you can change the factory defaults:

M, ②⑦①, **OK**—Resolution

M, ②⑦②, **OK**—Zooming

M, ②⑦③, **OK**—Origin

M, ②⑦④, **OK**—Contrast

M, ②⑦⑤, **OK**—Saturation

Saturation is the colour judged in proportion to its brightness: closer to **–** is greyer, **+** has greater saturation.

M, ②⑦⑥, **OK**—RGB

All colours can be defined as combinations of red (R), green (G) and blue (B). You can determine the proportion of each basic colour separately.

M, ②⑦⑦, **OK**—Luminosity

Luminosity is brightness: **–** is darker, **+** is lighter

M, ②⑦⑧, **OK**—Left/right margins

Printer settings

M, ②⑥①, **OK**—Paper size

M, ②⑥②, **OK**—Paper type

M, ②⑥③, **OK**—Reduction

M, ②⑥④, **OK**—Left/right margins

Hints & tips

Paper jam

In case of a paper jam, try to pull out the paper. If this is not possible, press **M**, ⑦④ and **OK** to eject the paper.

Vertical stripes

If your MF-JET 495 makes vertical stripes when copying, scanning or faxing, the scanner glass might be dirty (see Care and maintenance).

Horizontal stripes

When your MF-JET 495 makes horizontal stripes and/or rattling noises when copying, scanning or faxing, the scanner might be locked.

Open the machine. Unlock the scanner with the lever on the underside of the printer cover and close the machine.

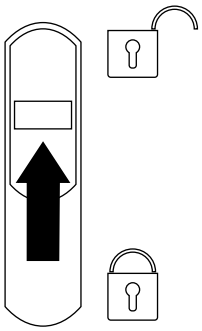

The machine doesn't print

If your MF-JET 495 doesn't print correctly, the reason might be that the protective strips were not removed completely from the printing cartridge.

Open the machine and remove the cartridges. Remove film residue, replace the cartridges and close the machine.

⚠ Every time you open and close the machine you will see the question NEW CARTRIDGE? Press ⓥ to return to the initial mode.

Speaker

If a fax transmission fails you can use this function to check the line (you will hear a connection being set up).

1 Press **M**, ③⑤ and **OK**. The built-in loudspeaker is switched on and you will hear the dial tone. Insert the document. Dial the number and press ◈. Fax transmission is started.

2 Press **M**, ③⑤, then **OK** twice. Fax reception is started.

Before you call the technical service

If you can't solve your problem with the proposals above, please unplug your MF-JET 495 from the mains and reconnect it after a few minutes.

Ordering information

You can order original cartridges and cleaning accessories at your local dealer or directly by calling 0800 358 08 07 (in the UK).

Change cartridges

⚠ The display tells you when a cartridge (black or colour) is coming to the end or is finally empty. When changing a cartridge, check that you are inserting the correct "Plug'n'Print" card. The relevant information is on the back of the "Plug'n'Print" card.

Please use only original PHILIPS ink cartridges!

1 Open the machine by pulling the lever under the control panel.

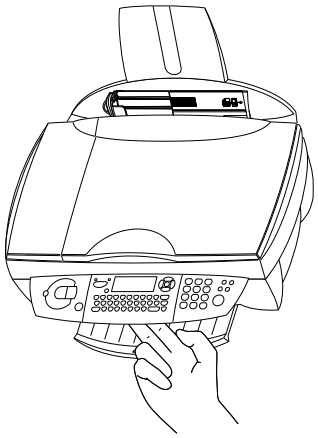

2 The position of the cartridge holder will show you which cartridge needs to be replaced. The arrows point to the cartridge that is empty.

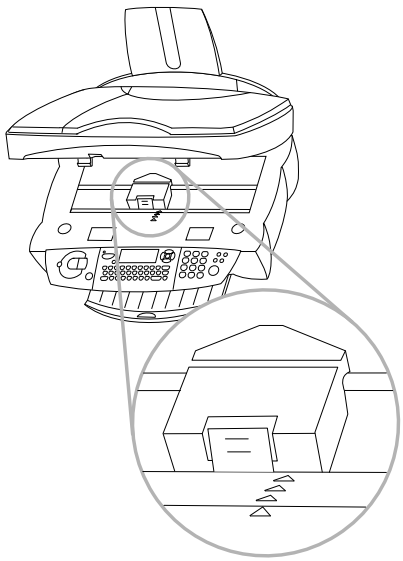

3 Open the cartridge holder.

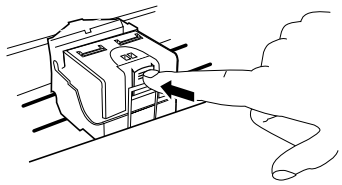

4 Remove the empty cartridge.

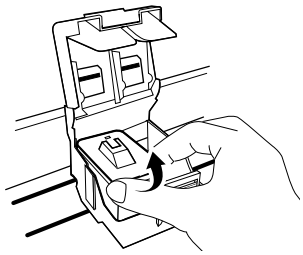

5 Take the ink cartridge out of its packaging and remove the protective strip. Be careful not to touch the nozzles and the contacts.

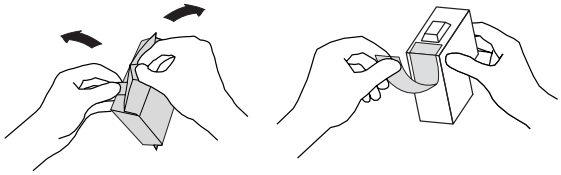

6 Insert the cartridge with the "nose" down into the cartridge holder—the **black cartridge right** and the **colour cartridge left**.

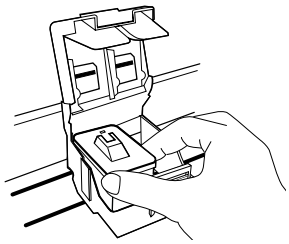

7 Close the cartridge holder. You will hear a click when it snaps shut.

8 Close the machine.

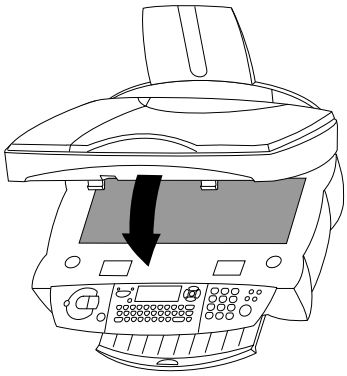

9 Insert the chip card "Plug'n'Print" with the contacts facing up into the slot below the control panel to update the cartridge information.

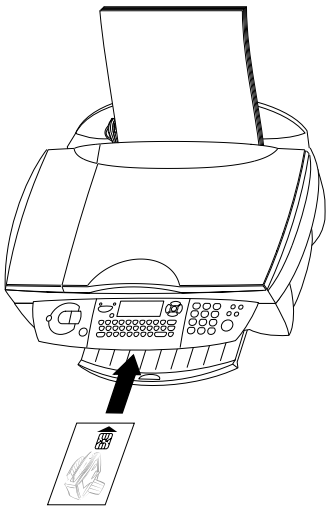

10 The cartridge is loaded when the following appears on the display: `ACTION COMPLETED`

`REMOVE CARD.`

Cartridge capacity

The machine records ink consumption and from this calculates the amount left.

> ⚠ The amount left is only valid if you load each new cartridge with the chip card supplied.

Press **M**, ⑦③ and **OK**. Press ▲/▼ to see the current capacity of the black and the colour cartridges.

Logs

The logs list contains the last 30 transmissions (faxes sent and received and SMS messages). A report will be automatically printed after every 30 transmissions. However, you may request a printout at any time.

Press **M**, ⑤② and **OK**. The logs are printed.

Commands

Your device will file all transmission commands (including faxes ready for polling or for delayed sending) in a list known as the waiting queue.

Consulting or modifying list

Documents in the waiting queue may have the following status:

TX—polling transmission

DOC—in deposit

POL—polling

IN PROGRESS—ongoing commands

SMS—SMS transmission

Press **M**, ⑥② and **OK**. Use ▲/▼ to select a document from the waiting queue and confirm with **OK**. Modify the parameters and confirm with **OK**.

Immediate transmission

Press **M**, ⑥① and **OK**. Use ▲/▼ to select the document in the waiting queue and confirm with ◇ or **OK** to immediately perform the selected fax or SMS transmission.

Cancelling a transmission

Press **M**, ⑥③ and **OK**. Use ▲/▼ to select the document in the waiting queue and confirm with **OK**.

Printing a document

Press **M**, ⑥④ and **OK**. Use ▲/▼ to select the document in the waiting queue and confirm with **OK**.

Print the waiting queue

Press **M**, ⑥⑤ and **OK**. A list of the documents queuing for transmission will be printed.

Lock

You can block access to the keypad for numbers or to the whole keyboard of your MF-JET 495.

Entering the code

Enter a four-digit code. This code is also used to cancel the keyboard lock.

1. Press **M**, ⑦①① and **OK**.
2. Enter the four-digit interlock code and press **OK**.
3. Enter the code one more time and press **OK**.

> ⚠ When a code is already registered, the machine asks you first to give the old code before allowing you to modify it.

Locking the keyboard

1. Press **M**, ⑦①② and **OK**.
2. Enter the four-digit interlock code (see Entering the code) and press **OK**.
3. Use ▲/▼ to select WITH and press **OK**.

The access code must be entered each time the machine is used.

> ⚠ After each operation, the machine locks automatically. To unlock the keyboard, enter WITHOUT in step **3**.

Locking numbers

You can also just lock the keypad for numbers with a code. Transmissions are only possible from numbers included in the directory.

1. Press **M**, ⑦①③ and **OK**.
2. Enter the four-digit interlock code (see Entering the code) and press **OK**.
3. Use ▲/▼ to select ONLY DIRECT. and press **OK**.

> ⚠ After each operation, the machine locks automatically. To unlock the keyboard, enter FREE in point **3**.

Registering and deregistering an additional cordless handset of the original type

Registering

Your cordless handset is set up at the factory for your base station and does not have to be registered. You can register up to five additional cordless handsets to your base station. For optimum performance of all the functions you should only register cordless handsets of the original type. Original cordless handsets can be ordered using the enclosed order form or contacting the call center (see Ordering information).

⚠ Please note that each additional cordless handset must be GAP-compatible. Check with your dealer.

1 On your base station, press **M**, ⑧① and **OK**.

2 Use the numerical keypad to enter a four-digit pin code, or press **OK** to accept the default code 0000. Press **OK**.

3 On the additional cordless handset press ▲/▼, ⑤①. Confirm AUTO with **OK**. The cordless handset is now automatically registered on the base station and accepts the pin code from the base station.

After the registration process the display shows the number under which the cordless handset is registered on the base station (for example 2).

Deregistering

If you would like to deregister an additional cordless handset from your base station, the procedure is as follows:

1 On your base station, press **M**, ⑧② and **OK**.

2 On the numeric keypad, enter the cordless handset you want to deregister. Press **OK**. HANDSET 2

Your base station will now release the connection to the additional cordless handset.

Registering a cordless handset on more than one base station

You can register a cordless handset on up to four base stations.

1 Register your cordless handset automatically on the first base station, as described above.

2 On the second base station, press **M**, ⑧① and **OK**.

3 Use the numerical keypad to enter a four-digit pin code, or press **OK** to accept the default code 0000. The pin code may be identical to the pin code on the first base station. Confirm with **OK**.

4 On the cordless handset press ▲/▼, ⑤① and select CUSTOM. Confirm with **OK**.

5 Use ▲/▼ to select a free storage location and confirm with **OK**.

6 Enter the same pin code that you set on the second base station and confirm with **OK**. The cordless handset is establishing a connection to the base station; this may take a few moments.

7 Use ▲/▼ to select the number you want to use to register the cordless handset on the second base station. This number appears on the display of the cordless handset when it is set to the second base station. Confirm with **OK**.

8 Repeat steps **2** to **7** to register your cordless handset to further base stations (maximum of four base stations).

Priority

With function 52 you can define the base station via which you make phone calls if you have registered your cordless handset to more than one base station. If you select the NONE option, the cordless handset will automatically set itself to the base station in range.

1 On the cordless handset, press ▲/▼ and ⑤②.

2 From the list of base stations, select the one to which you want to assign priority, or select NONE.

3 Confirm with **OK**. Press **C** twice.

⚠ If the required language does not appear on the display of your cordless handset, check whether the cordless handset is registered to the base station. Use function 202 to set the display language on the base station (see chapter **Settings** / Country and language).

Care and maintenance

Cleaning the machine

Use a soft, fluff-free cloth. You can also use a special cloth for cleaning machines (see Ordering Service). Never use liquid or gaseous cleaning agents (sprays, scouring agents, polishes, alcohol etc.). Do not allow any moisture to penetrate inside the device.

Cleaning the scanner glass

1 Open the scanner cover.

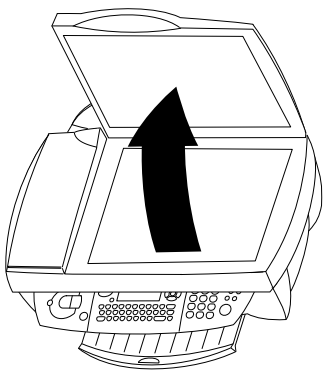

2 Use a cloth to lightly wipe the scanner glass (**A**).

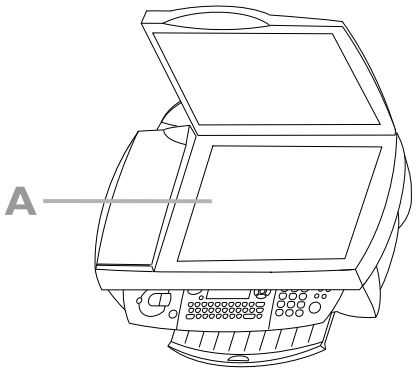

3 Close the scanner cover.

Cleaning and aligning the cartridges

If the quality of printed documents deteriorates, the cartridges should be cleaned and aligned.

1 Press **M**, ⑦②①①① and **OK**. The cartridge will be cleaned automatically.

2 Press **M**, ⑦②①②① and **OK**. The machine prints out a test page that helps you position the print heads of the two cartridges correctly. This is necessary to achieve the best possible print quality.

3 Use the number keypad to enter the number of the field in which the arrow appears clearest. ENTER VALUE A

4 Confirm with **OK** and repeat these steps for values B, C and D. ENTER VALUE B

If the printing quality is still not satisfactory, you need to clean the cartridges manually:

1 Open the machine, release the cartridges from their holder (see Change cartridges) and clean the contacts (**A**) with a dry, fluff-free cloth.

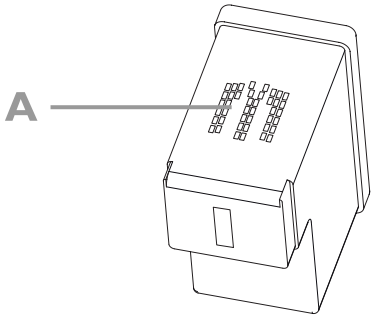

⚠ Never touch the nozzles and contacts with your fingers and avoid shaking the cartridge!

Every time you open and close the machine you will see the question NEW CARTRIDGE? Press ⓪ to return to the initial mode.

2 Place a lint-free cloth on a smooth surface. Moisten half of the cloth (**A**). Hold the cloth firmly to prevent creasing. Place the nozzle end of the cartridge on the moistened half (**A**) and move the cartridge in the direction of the arrow (**B**) into the dry half (**C**). Do this once only.

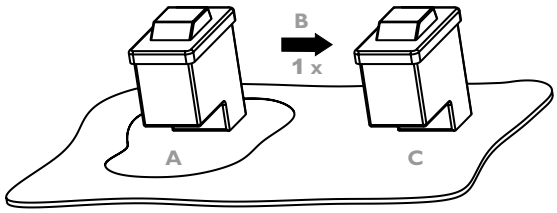

3 Clean the golden contacts of the holder before re-inserting the cartridge.

4 Use ▲/▼ to choose BLACK=OLD? and press twice **OK**.

5 Use ▲/▼ to choose COLOUR=OLD? and press twice **OK**.

Appendix

Functions list

Press **M**, ⑤① and **OK** to print a function list.

Directory

11 ADD NAME 23
Add a name with a number to the directory

12 ADD LIST 24
Join several directory entries to form a list

13 MODIFY 24
Modify directory entries or lists

14 CANCEL 24
Delete directory entries or lists

15 PRINT 24
Print the directory

Setup

21 DATE/TIME 17
Set the current date and time

22 NUMBER/NAME 17
Set your telephone number and your name

23 SEND 26
Set parameters for sending faxes

24 RECEPTION 35
Set parameters for receiving faxes

25 TEL. NETWORK 17
Settings for a private branch exchange system

26 PRINTER 36
Settings for the printer

27 FLAT BED SCAN 35
Settings for scanning

29 TECHNICALS 43
Advanced technical settings

20 GEOGRAPHICAL 17
Set country and language

Fax

31 TRANSMISSION 26
Send a fax

32 POLLING RX 26
Retrieve a fax from a polling provider

33 POLLING TX 26
Provide a fax for polling

34 FAX ANSW. 25
Set fax memory reception

35 MANUAL CALL 37
Manual fax transmission

SMS-Service

41 SEND SMS 33
Send an SMS message

42 READ SMS 33
Read SMS messages

43 DELETE SMS 34
Delete SMS messages from the memory

44 PRINT SMS 34
Print-out SMS messages

45 PARAMETERS 35
Settings for sending SMS

46 SMS CENTERS 35
Set access numbers for SMS

Print

51 FUNCTIONS LIST 42
Print a list of functions

52 LOGS 38
Print a log of the last 30 transmissions

53 DIRECTORY 24
Print the directory (is also function 15)

54 SETUP 17, 35
Print the settings

55 COMMANDS 39
Print a list of the commands in the waiting queue (is also function 65)

Commands

61 PERFORM 39
Immediately perform a command in the waiting queue

62 MODIFY 39
Modify a command in the waiting queue

63 CANCEL 39
Delete a command from the waiting queue

64 PRINT 39
Print details of a command in the waiting queue

65 PRINT LIST 39
Print a list of the commands in the waiting queue

Others

71 LOCK 39
Limit the access to the machine

72 PRINT. CARTR. 41
Clean, align and exchange cartridges

73 CART CAPACITY 38
Check the capacity of the ink cartridges

74 PAPER FEED 37
Feed paper through the mechanism

Cordless handset

81 REGISTER 40
Register additional telephones

82 DEREGISTER 40
Deregister additional telephones

83 SEARCH HANDS. 22
Search for cordless handset

84 TOTAL RINGS 18
Set the total number of rings

85 FAX RINGS 18
Set the number of rings for the fax switch

Technical settings

Your MF-JET 495 is delivered with factory-default settings.

> ⚠ Only change the technical settings if prompted to do so by authorised service personnel!

Press **M**, ②⑨ and **OK**. Use ▲/▼ to select and modify the desired parameter and press **OK**.

Technical data

General

Dimensions (W×D×H)	460×397×185 mm
Weight	approx. 6,5 kg
Power supply	220–240 V / 50–60 Hz
Power consumption in stand-by mode	approx. 10 W
Memory	50 pages
Directory capacity	200 entries
Telephone connection type	PSTN/PABX
Chip card	ISO 7816-4

PC connection

Connection type	USB slave 1.1
Operating systems	Windows® 98 SE/2000/ ME/XP
Scanner driver	TWAIN/WIA

SMS

Gateway	V23
Memory	30 messages

Scanner

Type	CCD colour
Resolution	600×600 dpi
Scanning area	210×297 mm
Scanning width	206 mm
Flatbed scanning speed	b/w: 10.5 seconds/page colour: 17.5 seconds/ page
Resolution	256 grey tones

Printer

Type	colour bubble ink-jet
Resolution	2400×1200 dpi
Printing speed	b/w: up to 13 pages/ minute colour: up to 7 pages/ minute
Printing width	203.2 mm
Printing length	b/w: 284.3 mm, colour: 279.1 mm
Paper dimensions	width: 88.9–203.2 mm length: 127–283.3 mm
Paper weight	A4 80 g/m² A5 min. 120 g/m²

Copier

Fax type	stand-alone coloured
Resolution	fast: 300×300 dpi normal: 600×600 dpi quality: 1200×1200 dpi

Fax

Fax type	ITU T30, G3
Connection type	PSTN/PABX
Dialling type	DTMF
Modulation	V17/V21/V29/V27ter/ V34
Coding scheme	MH, MR, MMR
Modem speed	33k6 bps
Resolution	normal mode: 200×100 dpi fine/photo mode: 200×200 dpi super fine mode: 200×400 dpi

Cordless handset

Max. range	outdoors: 300 m indoors: 50 m
Max. talk time	10 hours
Max. standby time	120 hours

Appendix

Guarantee

(UK Terms and Conditions)

SAGEM SA is the European Number 1 in fax and offers a complete range of fax terminals with Internet access and SMS function, multi-functional terminals and servers covering the needs of all its customers—from home-users to multinational organisations.

In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM directly, the following shall apply:

A SAGEM undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the equipment, where those defects are a result of faulty workmanship.

During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM After Sales Department, the phone number of which can be found on the delivery slip.

Unless the customer has concluded with SAGEM a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises.

The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this document and to the extent permitted by law, SAGEM makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded. This guarantee does not affect the customer's statutory rights.

B Exclusions from guarantee

SAGEM shall have no liability under the guarantee in respect of:

- damage, defects breakdown or malfunction due to:
  - failure to properly follow the installation process and instructions for use; or
  - an external cause to the equipment (including but not limited to, lightening, fire, shock or water damage of any nature); or
  - modifications made without the written approval of SAGEM; or
  - a failure or neglect to maintain the equipment or inappropriate maintenance; or
  - unsuitable operating conditions, particularly of temperature and humidity; or
  - repair or maintenance of the equipment by persons not authorised by SAGEM; or
- wear and tear from normal daily use of the equipment and its accessories
- damage due to insufficient or bad packaging of equipment when returned to SAGEM
- supply of new versions of software
- work on any equipment or software modified or added without the prior written consent of SAGEM
- malfunctions not resulting from the equipment or from software installed in user workstations for the purpose of use of the equipment
- communication problems related to an unsuitable environment, including:
  - problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
  - transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)
  - the local network fault (wiring, servers, workstations) or the failure of the transmission network
- the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer.

C In the cases set forth in § B as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM. The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

Appendix

Index

A

Acrobat Reader 12
additional devices 9
additional telephone 21
adjusting the call volume 21
advanced settings 35
  fax settings 35
  printer settings 36
  scan settings 35
  settings list 35
  SMS settings 35
aligning the cartridges 41
answering machine. *see* external answering machine
appendix 42
audible signals 21

B

black-and-white copy
  key 3
broadcast 25
  key 3

C

C-key
  on the cordless handset 4
caire and maintenance
  cleaning the machine 40
  cleaning the scanner glass 40
call
  forward 22
  making a call 20
calling line identification (CLIP) 20
cartridge 10
  alignment 11
  black 11
  capacity 38
  change 37
  charge 11
  colour 11
charger for the cordless handset 7
code
  unlock keyboard 39
colour copy
  key 3
commands 39
  cancelling a transmission 39
  consulting or modifying list 39
  immediate transmission 39
  printing a document 39
confirm
  key 3
connections 9
contents of the installation CD 15
contrast 3, 25, 28
  key 3
copy 27
  black-and-white 3
  black-and-white copy 27
  colour 3
  inserting a document 27
  key 3
  optional 27
  standard 27
copying quality 27
cordless handset 20
  additional telephone 21
  adjusting the call volume 21
  audible signals 21
  calling line identification (CLIP) 20
  deregistering a handset 40
  display language 40
  functions on cordless handset 4
  internal phone calls 21
  locate the cordless handset 22
  making a call 20
  muting 21
  priority 40
  redial 20
  register 39
  registering a cordless handset on more than one base station 40
  ringer volume 20
  ring signal type 20
  silent call reception 21
  switching on and off 22
  telephone book 20
correcting
  entries (base station) 24
  entries (cordless handset) 20
country selection 17
creative copy 27
cursor
  key 3

D

delayed transmission 26
delete
  entries (base station) 24
  entries (cordless handset) 20
  key 3
  SMS-messages 34
deregistering a handset 40
description of the machine 2
dial-key (cordless handset) 4
directory A-Z (base station) 3, 23
  add group 24
  add name 23
  cancel 24
  modify 24
  print 24
  transfer to a PC 24
  Use 24
display language
  base station 17
  cordless handset 17, 40
display symbols
  on the base station 2
  on the cordless handset 2
document
  insert 27
  scan 29

E

e-mail 29
enter
  own name and number 11
external answering machine 18

F

fax 23
  answering device 25
  broadcast 25
  contrast 25
  delayed transmission 26
  fax reception 18
  memory lock 25
  polling 26
  receiving faxes 25
  redial 24
  resolution 25
  sending a fax 23
  send report 26
  settings 35
fax answering device. *see* memory lock
fax reception 25
  completely silent operation 18
  manual fax reception 18
  silent fax reception 18
fax settings
  number of copies 35
  sorted printing 35
functions list (base station) 42
function list
  cordless handset 4

H

HELP function 17
hints & tips 37
  care and maintenance 40
  commands 39
  horizontal stripes 37
  ordering information 37
  paper feed 37
  registering and deregistering an additional cordless handset of the original type 39
  technical service 37
  vertical stripes 37

I

ink cartridge. *see* cartridge
insert
  cartridge 10
  dokument 27
installation 7
  additional devices 9
  cartridge alignment 11
  connections 9
  country selection 10
  date and time 12
  inserting cartridges 10
  loading paper 7
  name and number 11
  operating base station 7
  operating cordless handset 8
  PC connection 12
  power supply 10
  unpacking 7
ISDN connection 17

K

keypad
  base station 3
  cordless handset 4

L

language 17
Linux 12
locate the cordless handset 22
lock 39
  locking numbers 39
  locking the keyboard 39
loudspeaker (on the base station) 37
loudspeaker (on the cordless handset) 21

M

Macintosh® 12
making a call 20
memory lock 25
menu functions
  base station 42
  cordless handset 4
MF-Inkjet 12
MF-TWAIN driver 30

N

network type (PABX) 17
nozzles 41

O

OCR 29
OK-key
  base station 3
  cordless handset 4
operating
  the base station 7
  the cordless handset 8
optional copy 27

P

„Plug'n'Print"
  chip card 38
  starter card 7, 11
paper
  feed (jam) 37
  loading 7
  set paper size 36
  set paper type 36
Paper Port 12
PC
  connection 12
  scan 29
  transfer directory from the base station 24
Photo Impression 12
polling 26
  delayed 26
  reception 26
  transmission 26
power supply 10
print
  directory (base station) 24
  functions list 42
  Help page 17
  multiple printing 35
  number of copies 31
  paper size 31
  paper type 31
  print a document (command) 39
  print quality 31
  settings list 35
  SMS automatically 35
  sorted printing 35
  status of the printer 32
printer settings 36

R

R-key
  cordless handset 4
reception
  of faxes 18
  of silent calls on cordless handset 21
  of SMS 33
redial 3
  key (base station) 3
  key (cordless handset) 4
  on base station 24
  on the cordless handset 20
registering
  cordless handset of original type 39
resolution 25
  fine/photo mode 25
  key 3
  normal mode 25
  standard mode 25
  super fine mode 25
RGB 28
ringer volume 20
ring signal type 20

S

safety instructions 6
saturation 28
scan 29
  inserting a document 29
  key 3
scan settings
  contrast 35
  origin 35
  resolution 35
  saturation 35
  zooming 35
scan window 29
select
  country (base station) 10, 18
  country (cordless handset) 18
send
  an SMS 33
  a fax 23
send report 23, 26
settings 17
  country and language 18
  date and time 17
  fax reception 18
  network type (PABX) 17
silent call reception 21
SMS 31
  provider 33
  receiving 33
  sending 33
SMS settings
  alternative reception 35
  automatic printing 35
  emission 35
  reception 35
  reception beep 35
  sender name 35
software installation 12
  Acrobat Reader 12
  MF-Inkjet 12
  Paper Port 12
  Photo Impression 12
special settings
  completely silent operation 18
  manual fax reception 18
  silent fax reception 18
stand-by mode 3
standard copy 27
start
  key (base station) 3
stop
  key (base station) 3
storing
  numbers (base station) 23
  numbers (cordless handset) 20

T

technical data 43
technical settings 43
telephone book (cordless handset) 20
  correcting entries 20
  deleting entries 20
  storing numbers 20
  using 20
telephone socket 9

U

unpacking 7
USB cable 12
USB port 12, 13

V

volume
  call volume (cordless handset) 21
  ringer volume (cordless handset) 21

W

Windows® 12, 13

The CE mark confirms that the machine corresponds to the relevant European Union guidelines.

DECLARATION OF CONFORMITY (DoC)

Hereby, **SAGEM Communication Austria GmbH**, declares that this **PHILIPS MFP 495** is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Should you require a copy of the original DoC, please visit our web site.

This product is intended for use on an analogue public switched network (PSTN) and for use in the country indicated on the label of the box. The machine may not work in other countries.

For further information please contact your national technical support centre. Initially contact your dealer if problems occur during operation.

This operating manual has been printed on chlorine-free recycled paper to meet the highest environmental standards.

The cardboard box and the protective cardboard can be recycled as waste paper; corresponding to your country's demands dispose the plastic foils either for recycling or with your rubbish.

This electronic facility contains recyclable material. At the end of use of this facility please inform yourself about the corresponding recycling demands of your country.

www.sagem.com

E-mail: dti.faxinfoline@sagem.com

United Kingdom:

Tel.: 0870 124 37 37
Fax: 0870 124 02 02

SAGEM SA
Le Ponant de Paris
27, rue Leblanc
75512 PARIS CEDEX 15

Technical changes and errors excepted.

non-contractual document

Copyright © 2004 SAGEM Communication Austria GmbH